



Assembly and users manual

Light arm

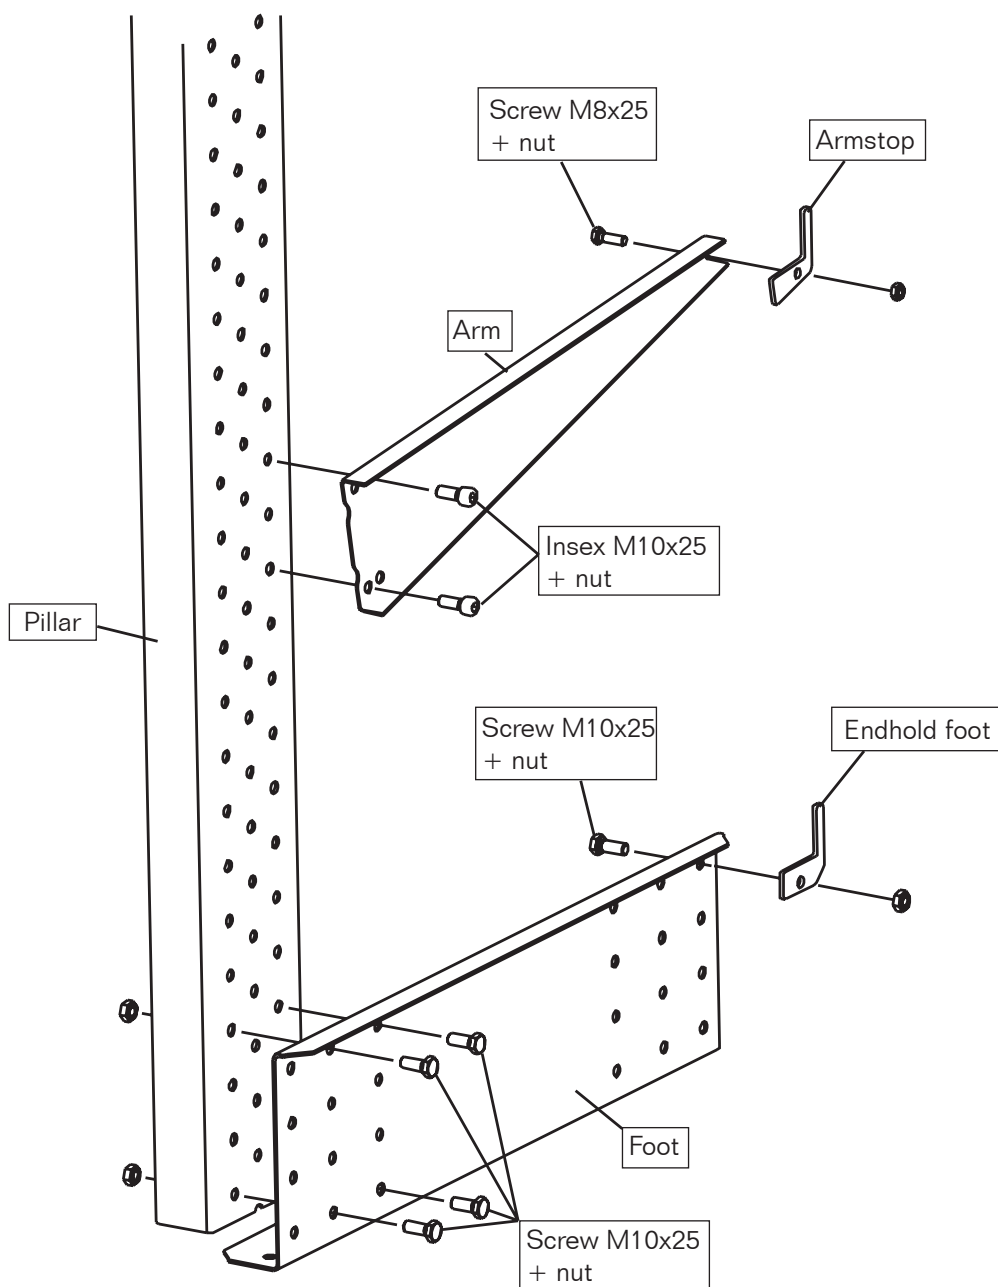

BRACING

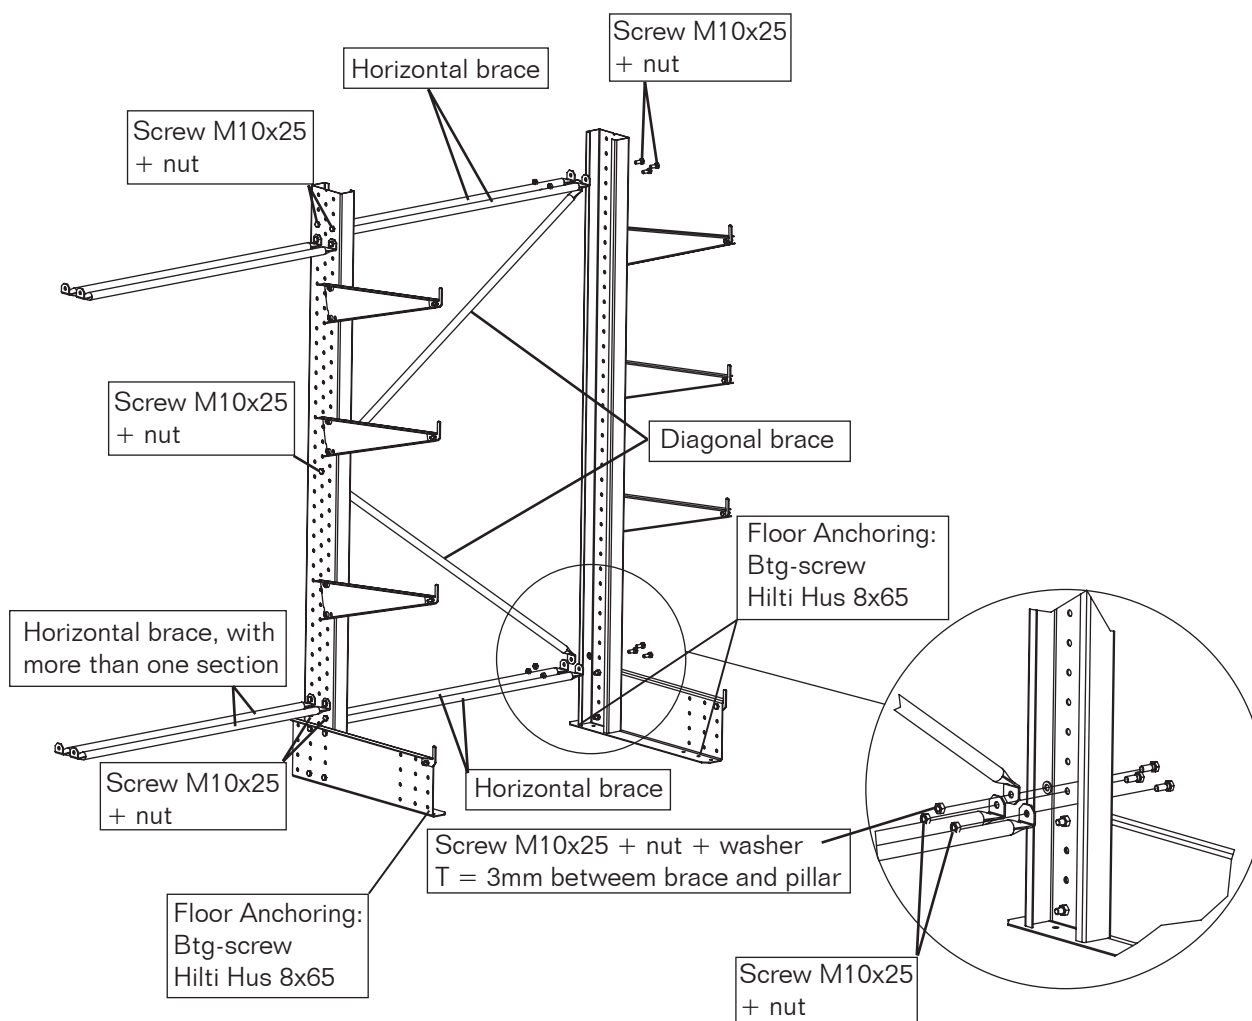

The number of sections with cross braces = $\frac{\text{The number of pillars}}{2}$ round up

4 Horizontal braces in sections without diagonal braces

Ex.



2 pillars



 
3 pillars



4 pillars



5 pillars



6 pillars



333 33 SMÅLANDSSTENAR
TEL +46 371-340 00 www.eab.se