


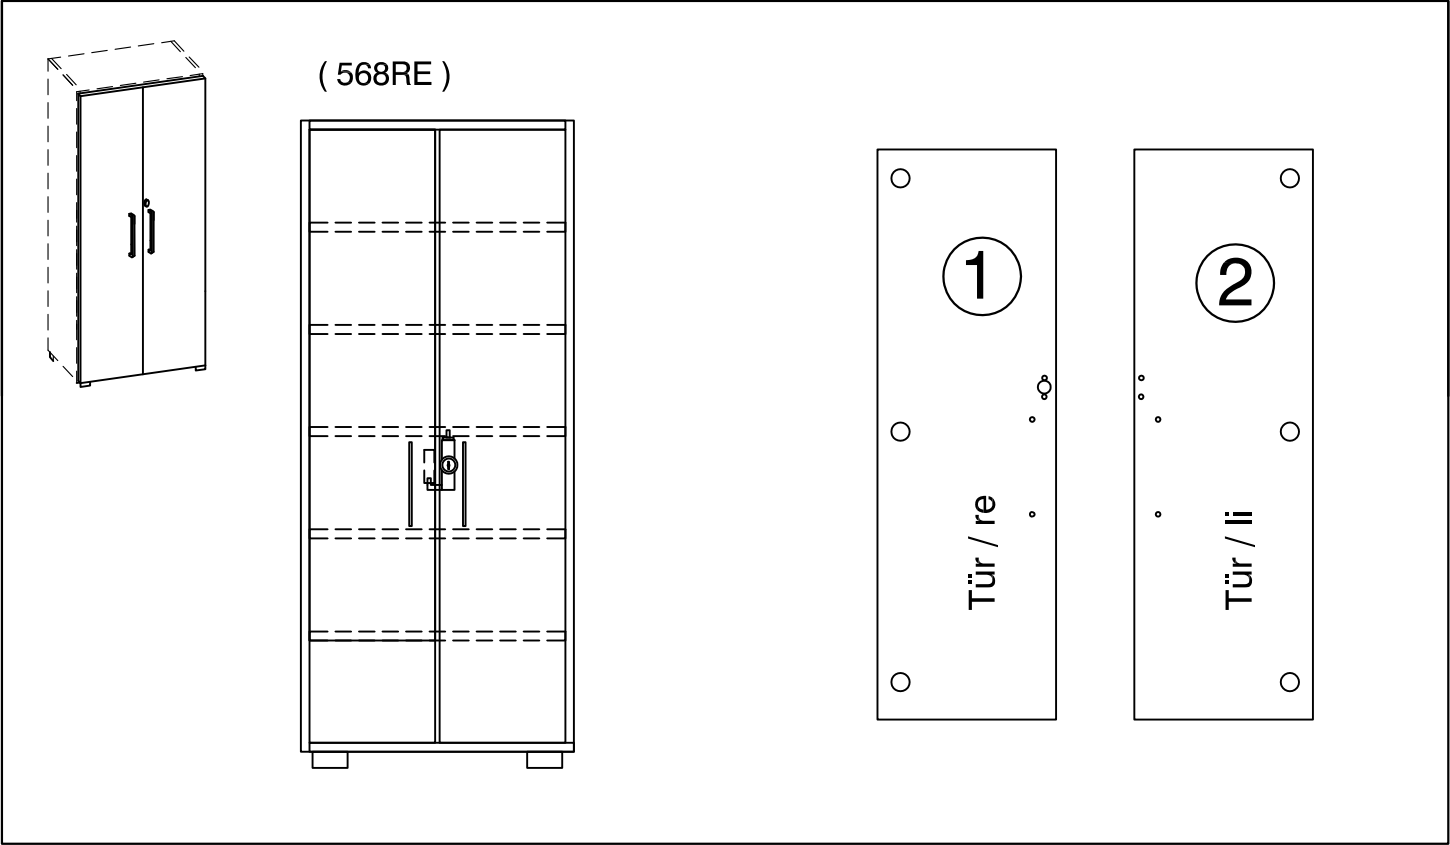


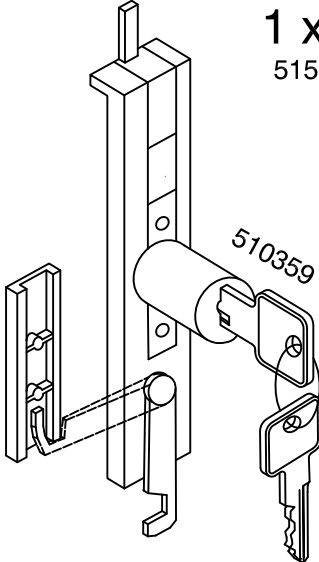
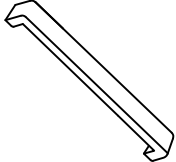
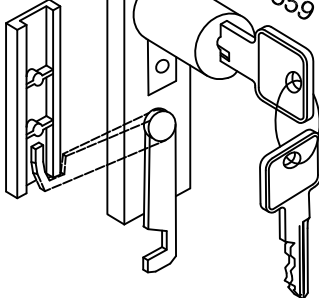





Beipack: Türen			5T6xx
6 x (A)  500334	6 x (B)  500357	4 x (C)  500220 3,5 x 20mm	1 x (D) 515780  510359
4 x (F)  500322 M4 x 23mm	2 x (G)  555192 BA 192mm	1 x (E) 515779 	

● Sie benötigen dieses Werkzeug / tool :


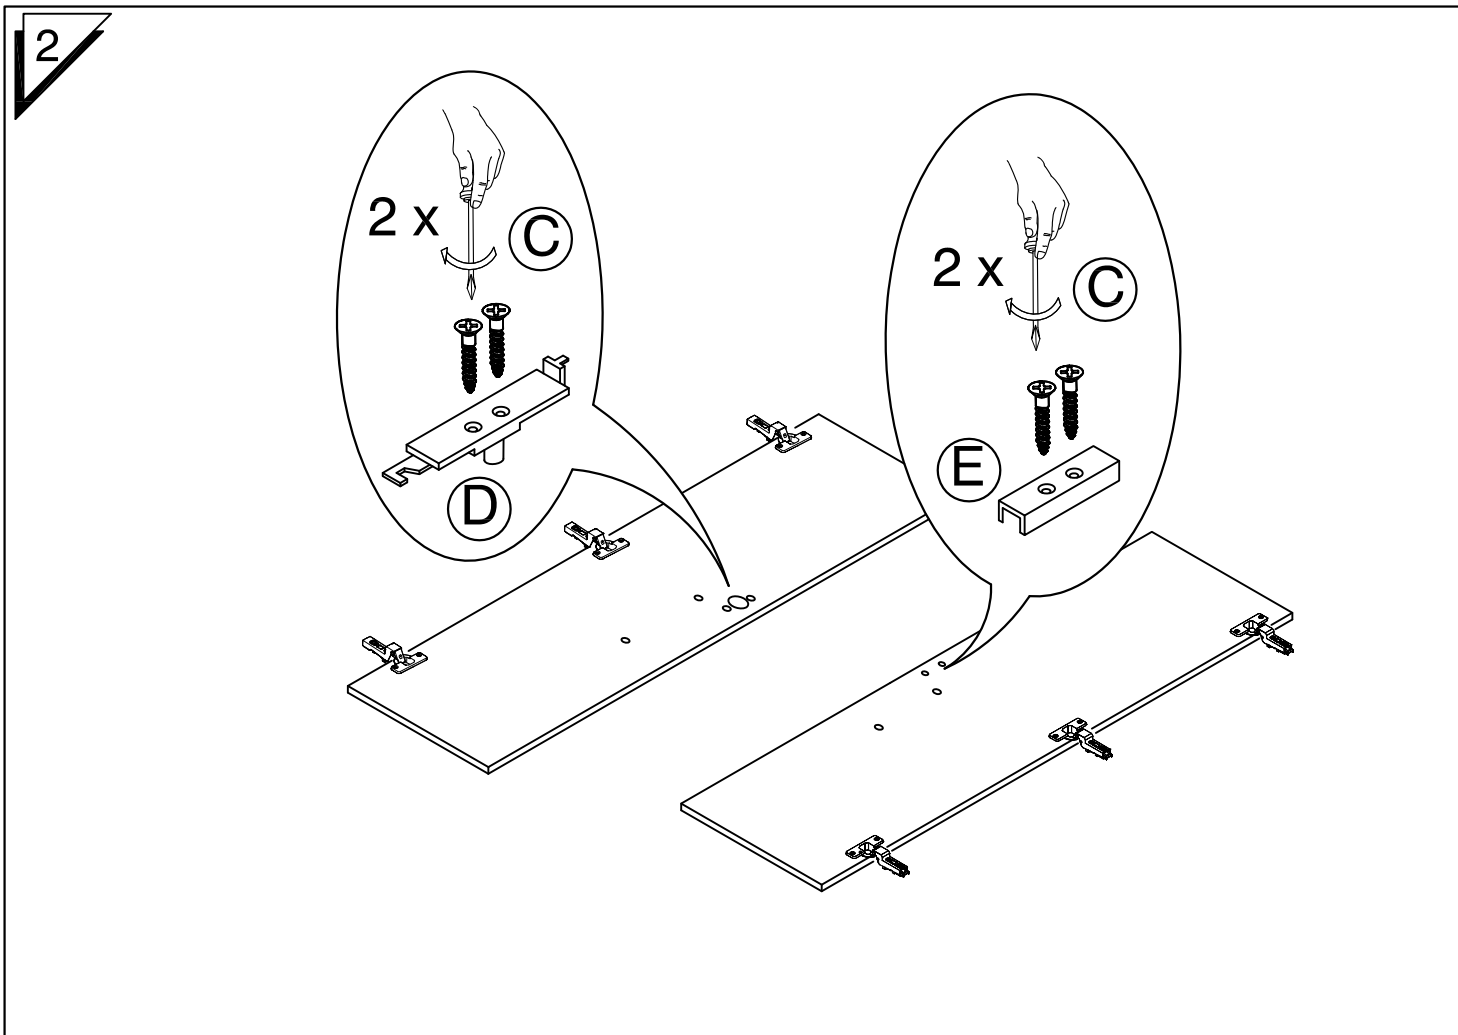


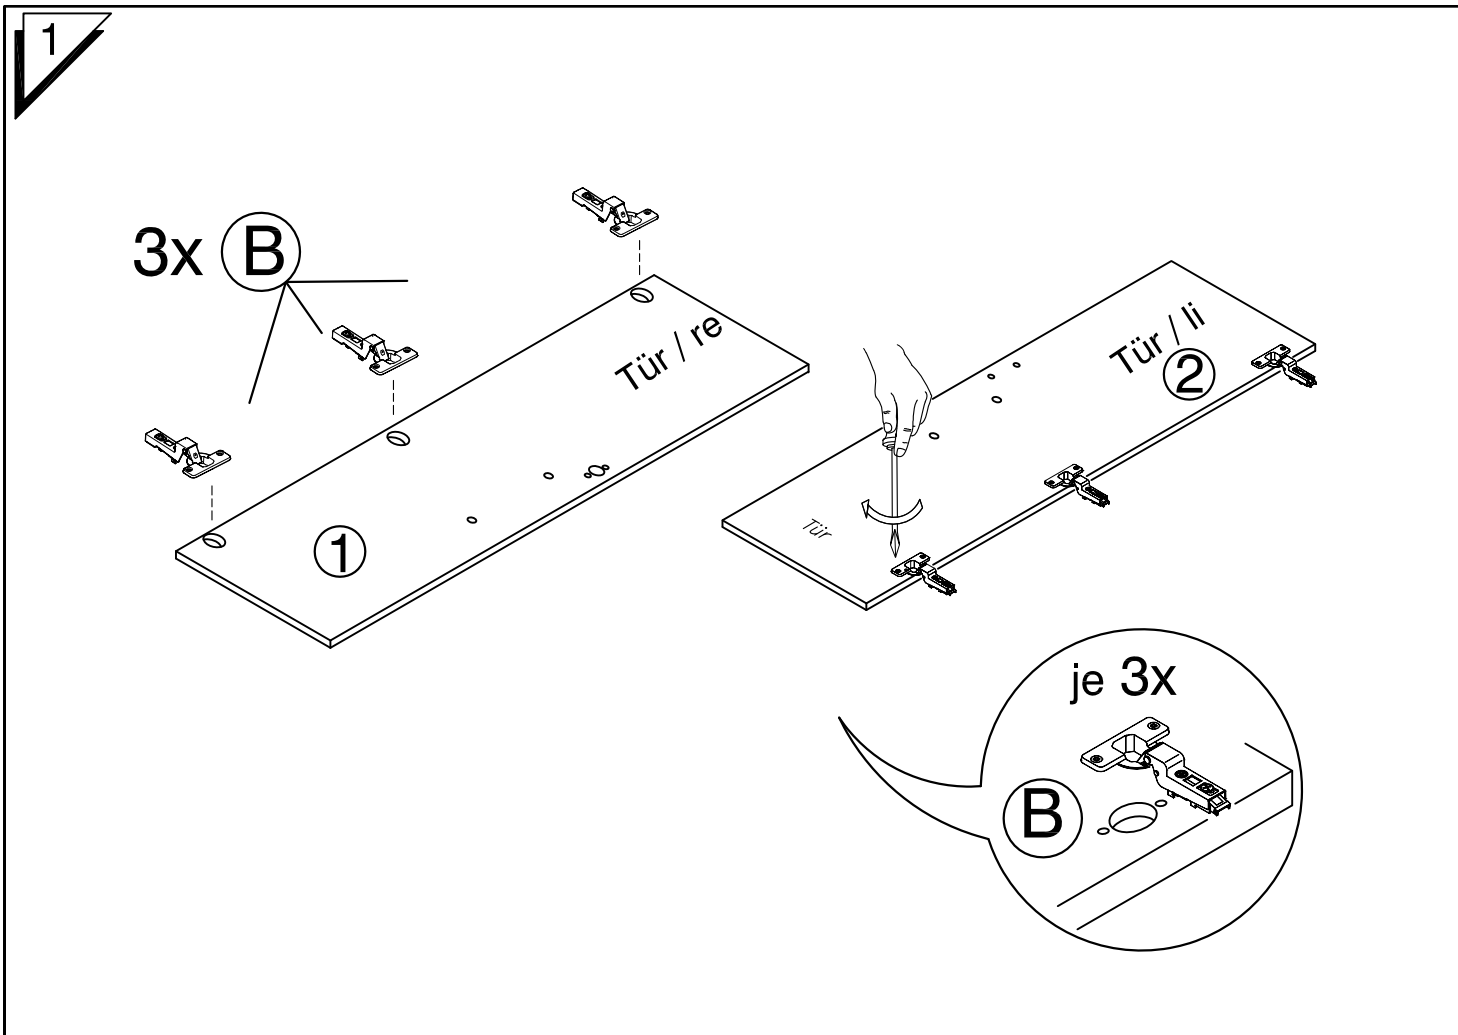




3

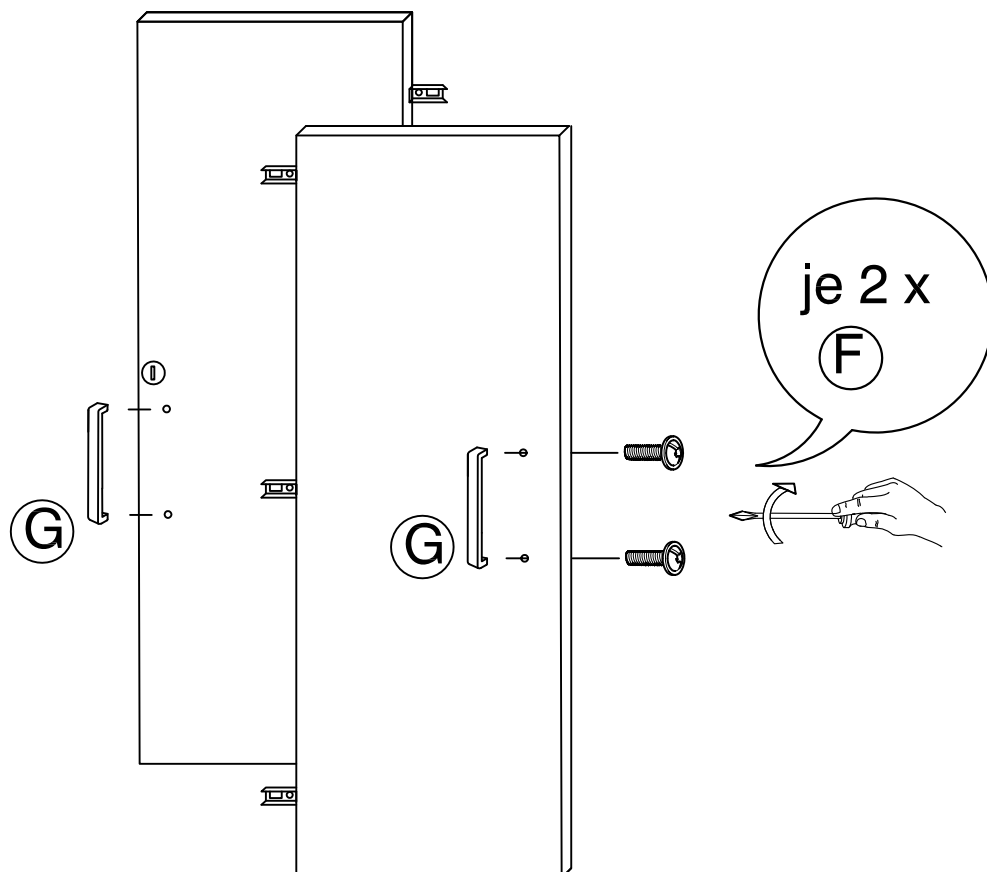












4

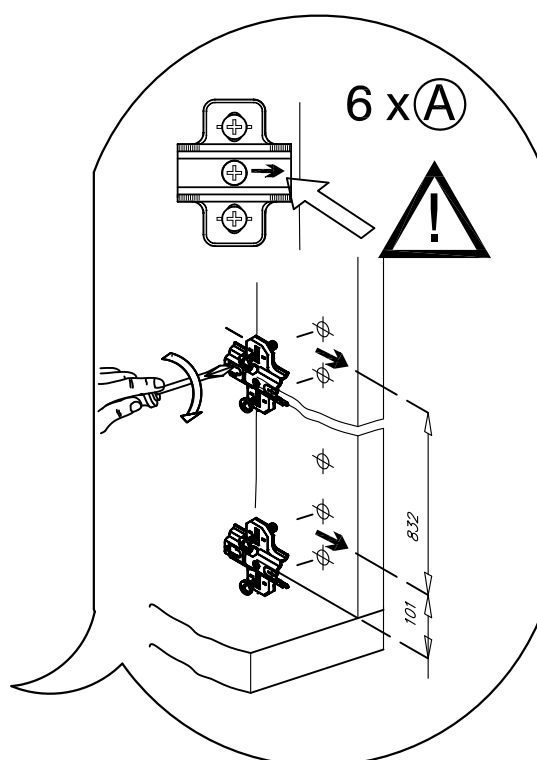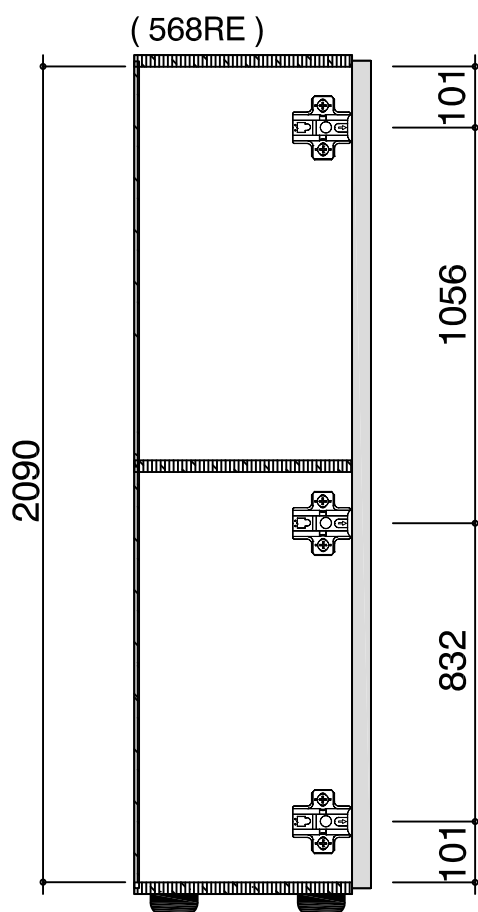


5

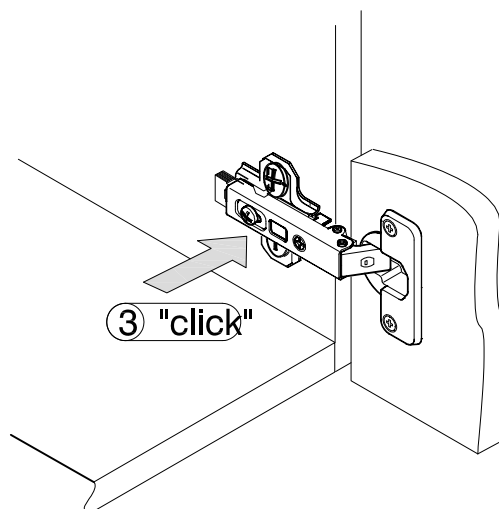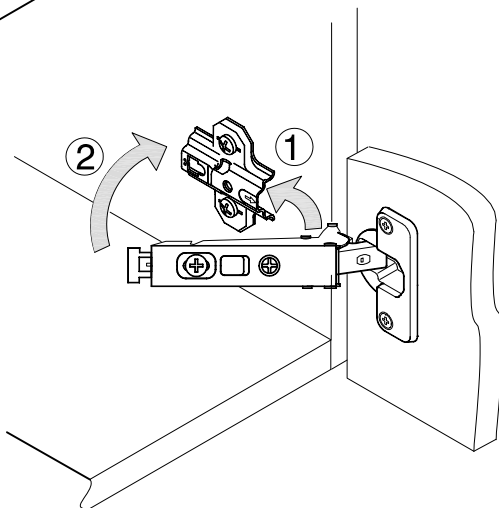
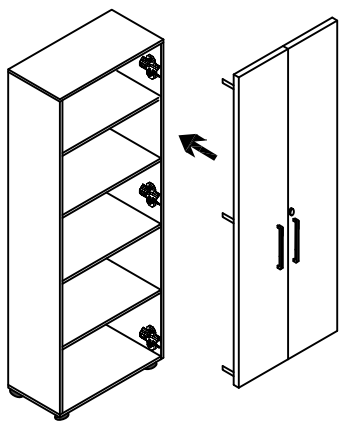




6

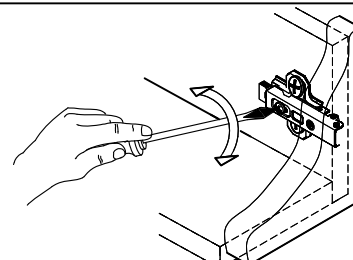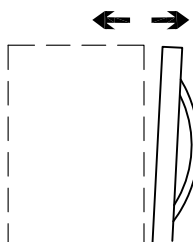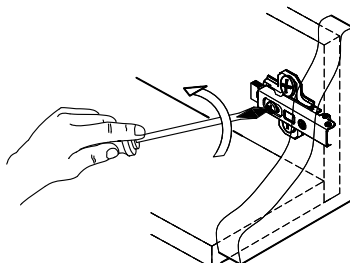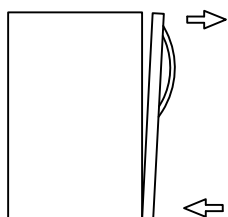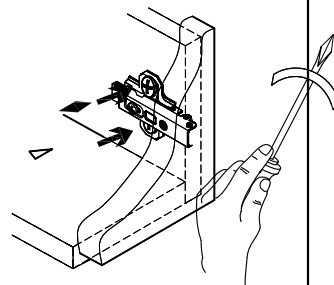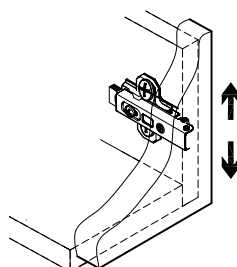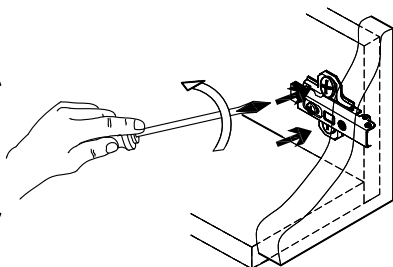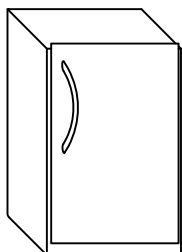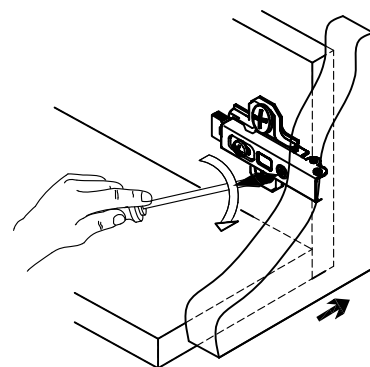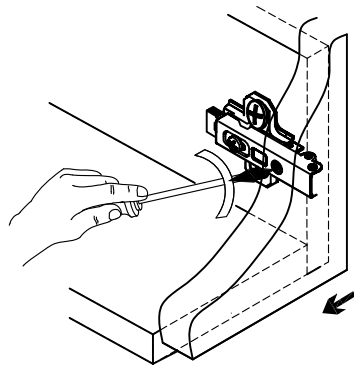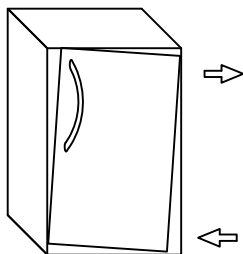



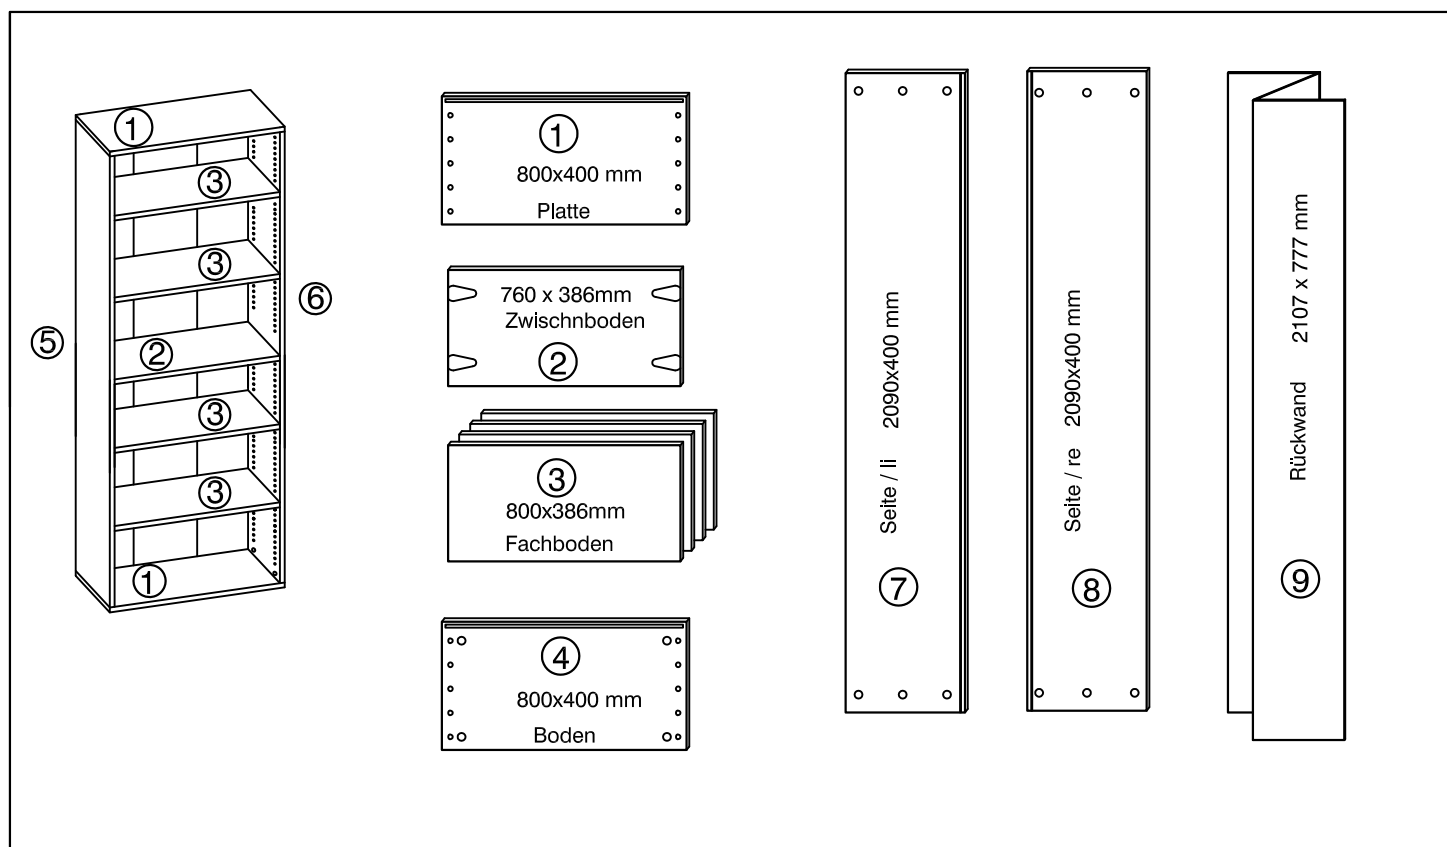


Beipack: Korpus				568xx
4 x (A) 500568	12 x (B) 500270	12 x (C) 500360	6 x (D) 500378	6 x (E) 500222
16 x (F) 508667	4 x (G) 500273 + 500274	4 x (H) 500271	8 x (J) 500578 8x30mm	4 x (K) 18/14 500547
● Sie benötigen dieses Werkzeug / tool : Ø 5mm				1 x (L) SW4 500278


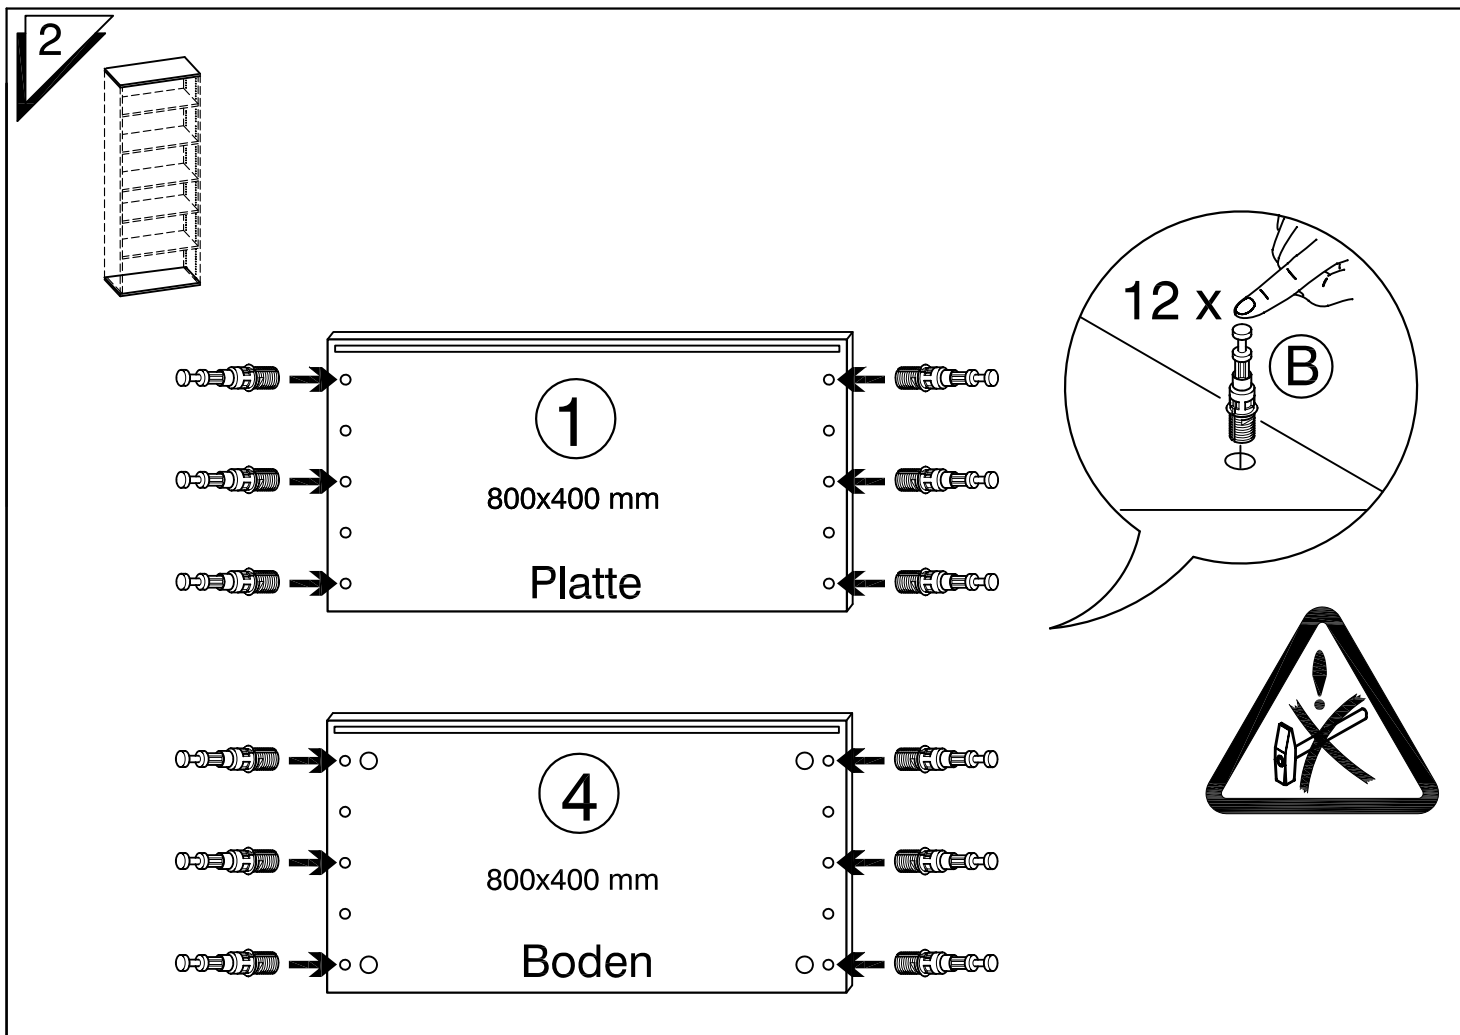
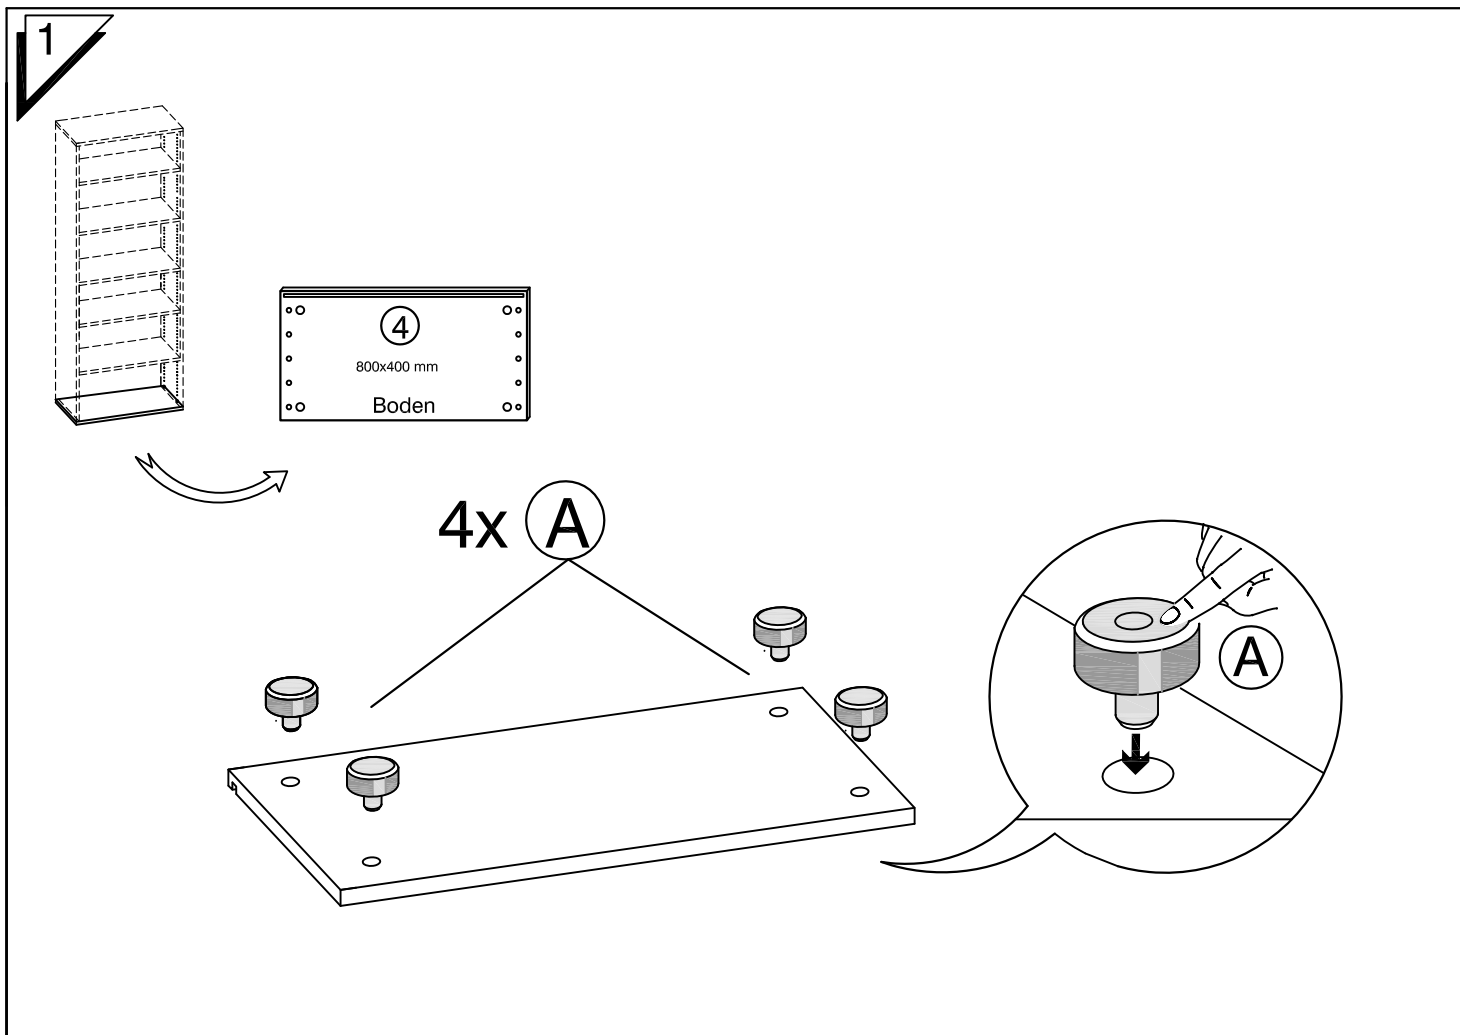


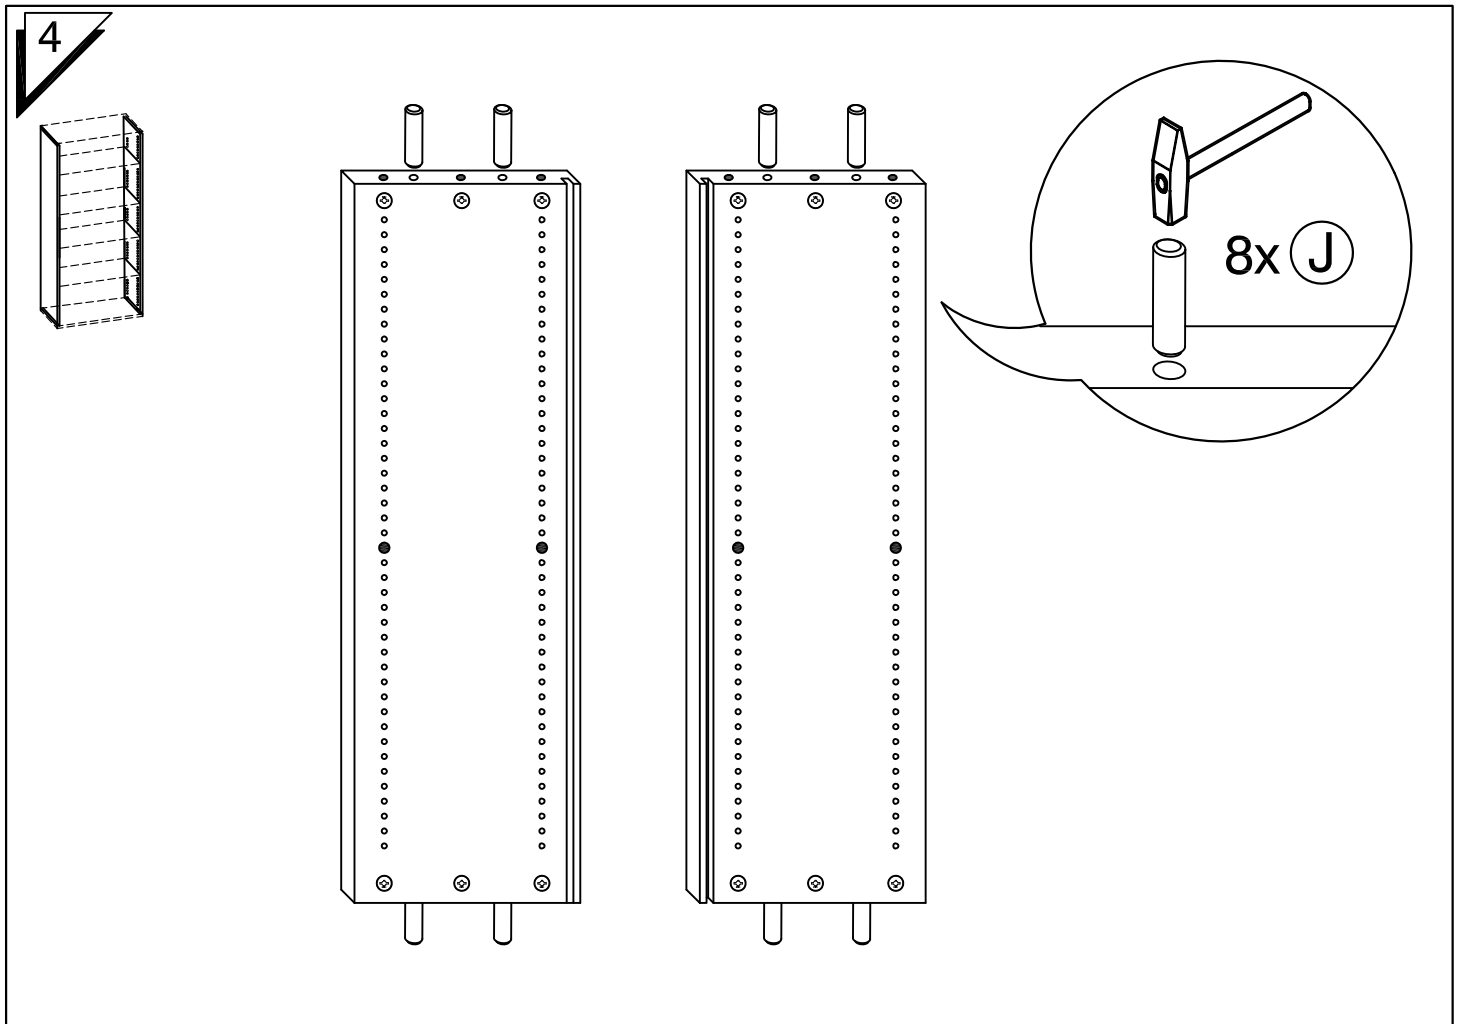
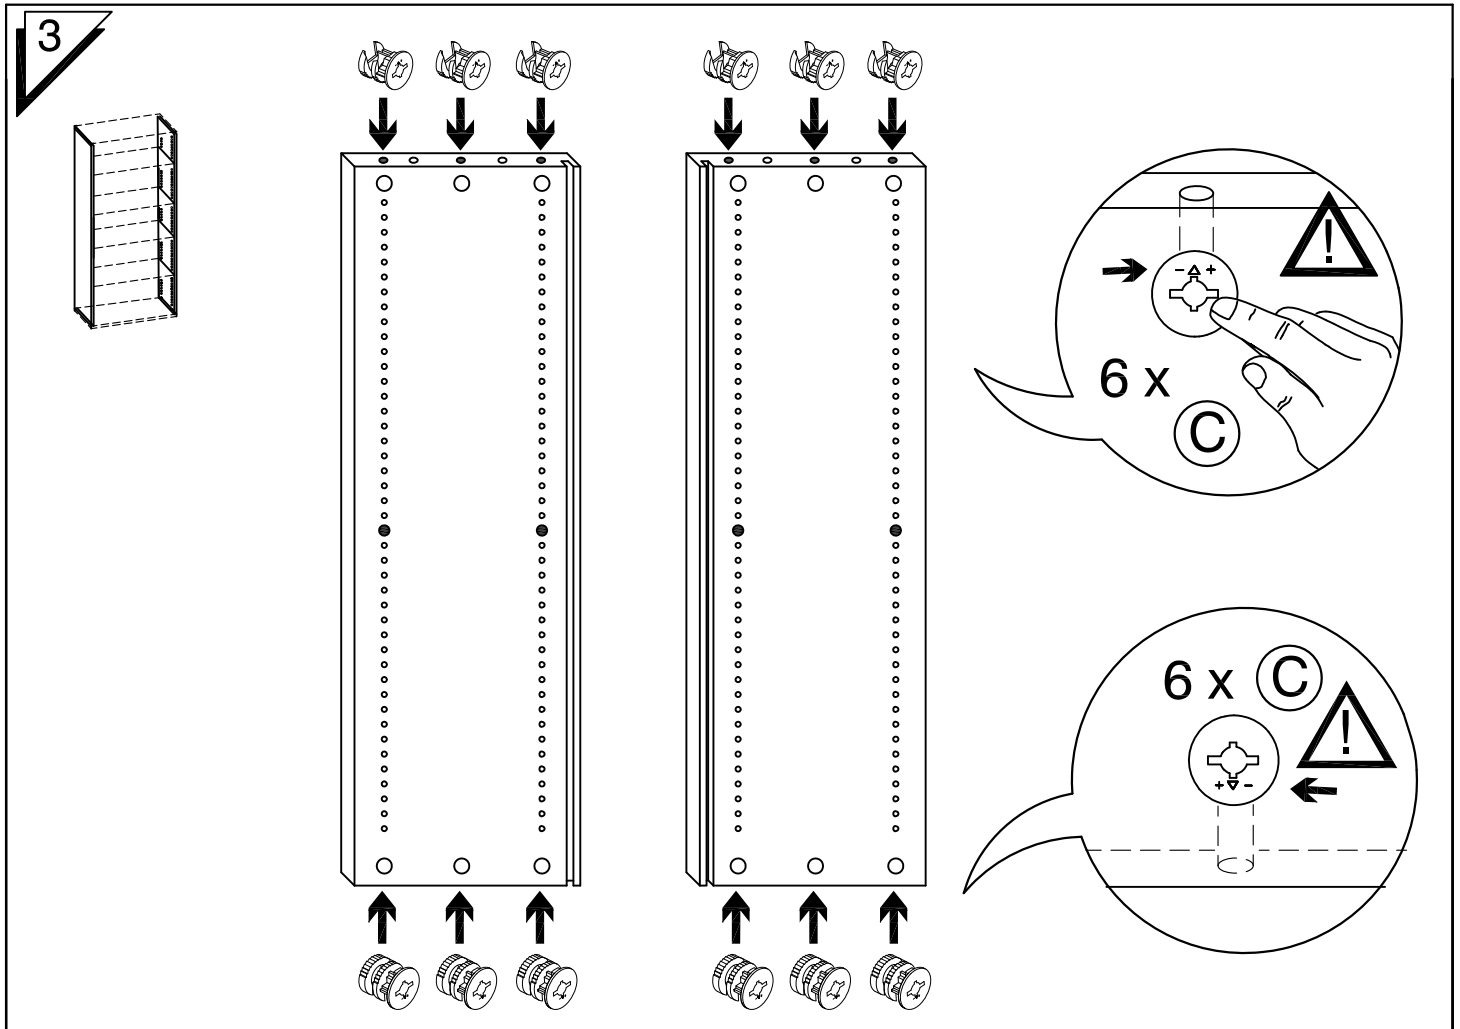


5

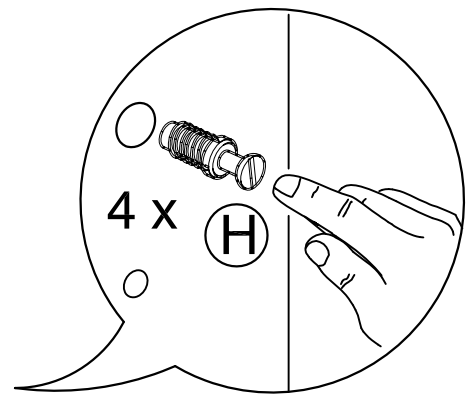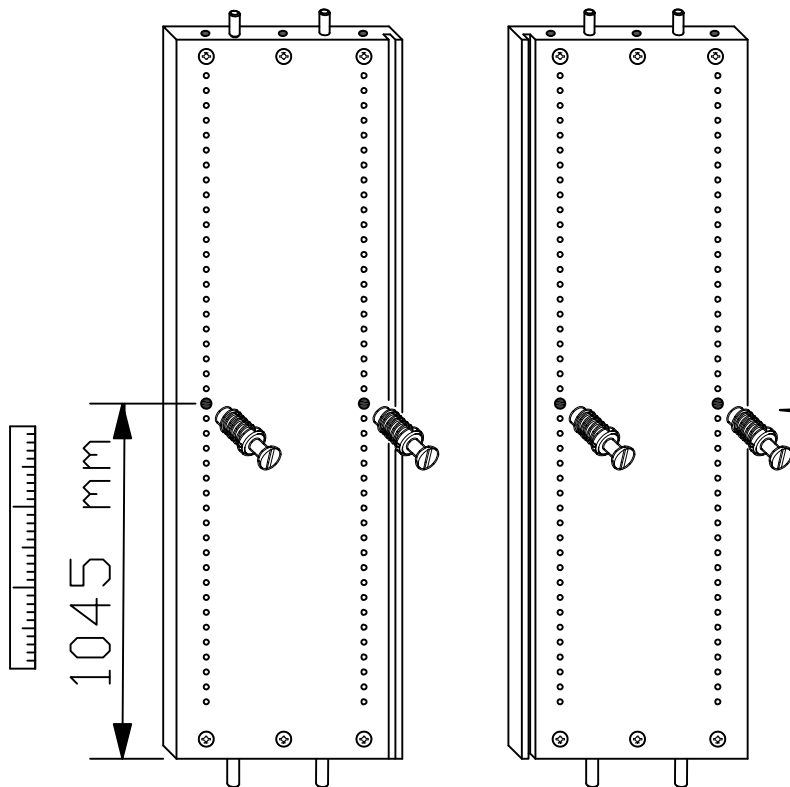



6

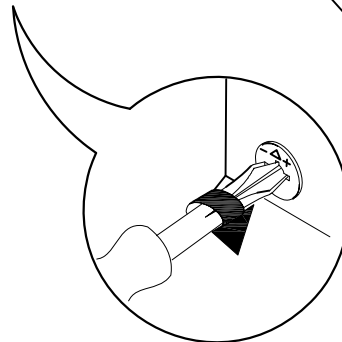
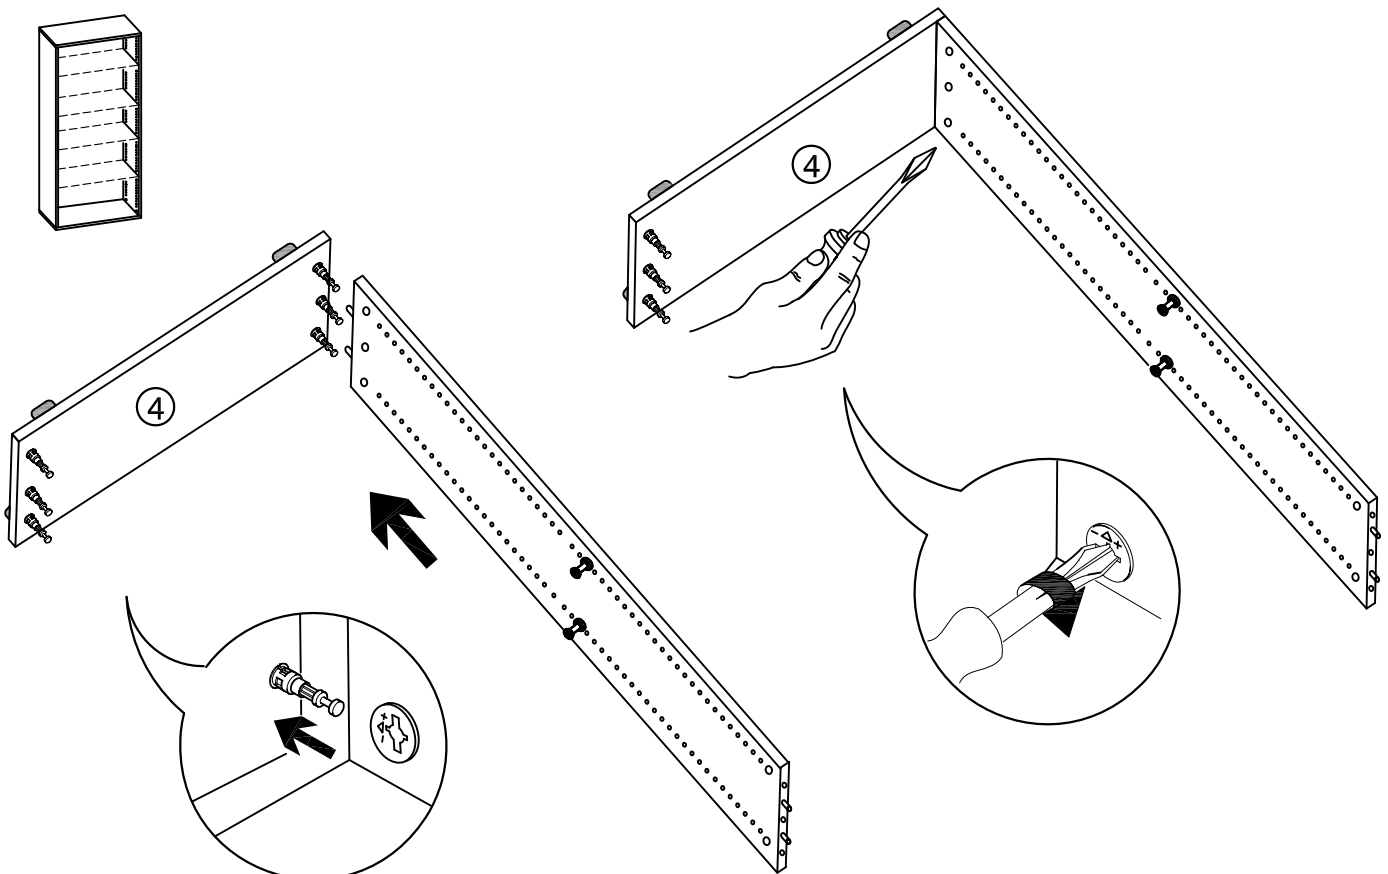



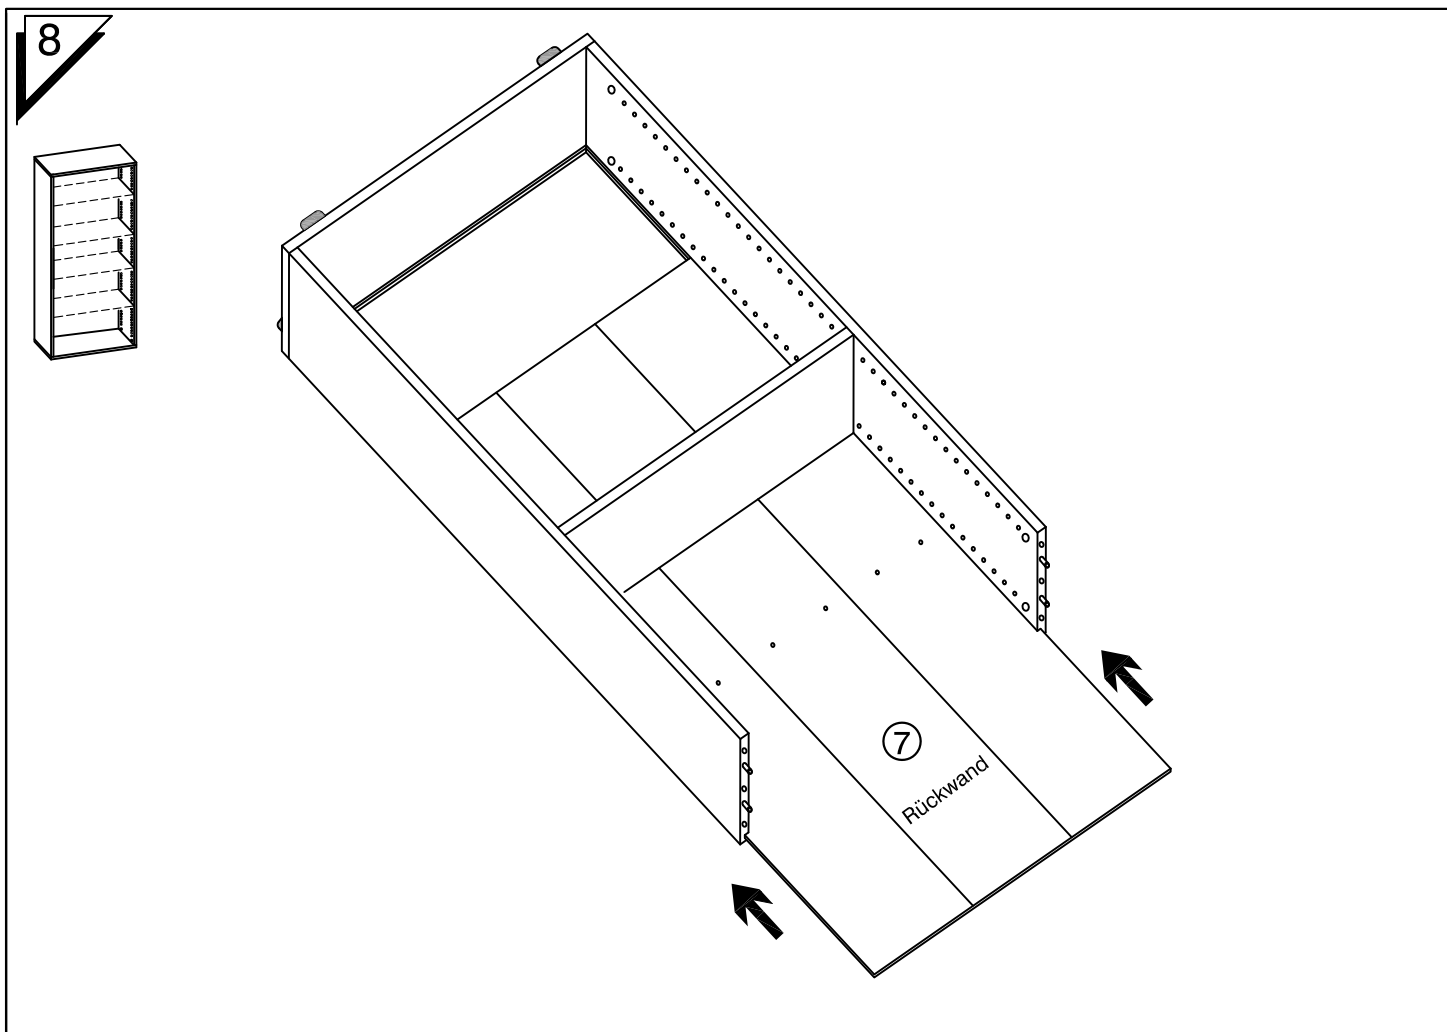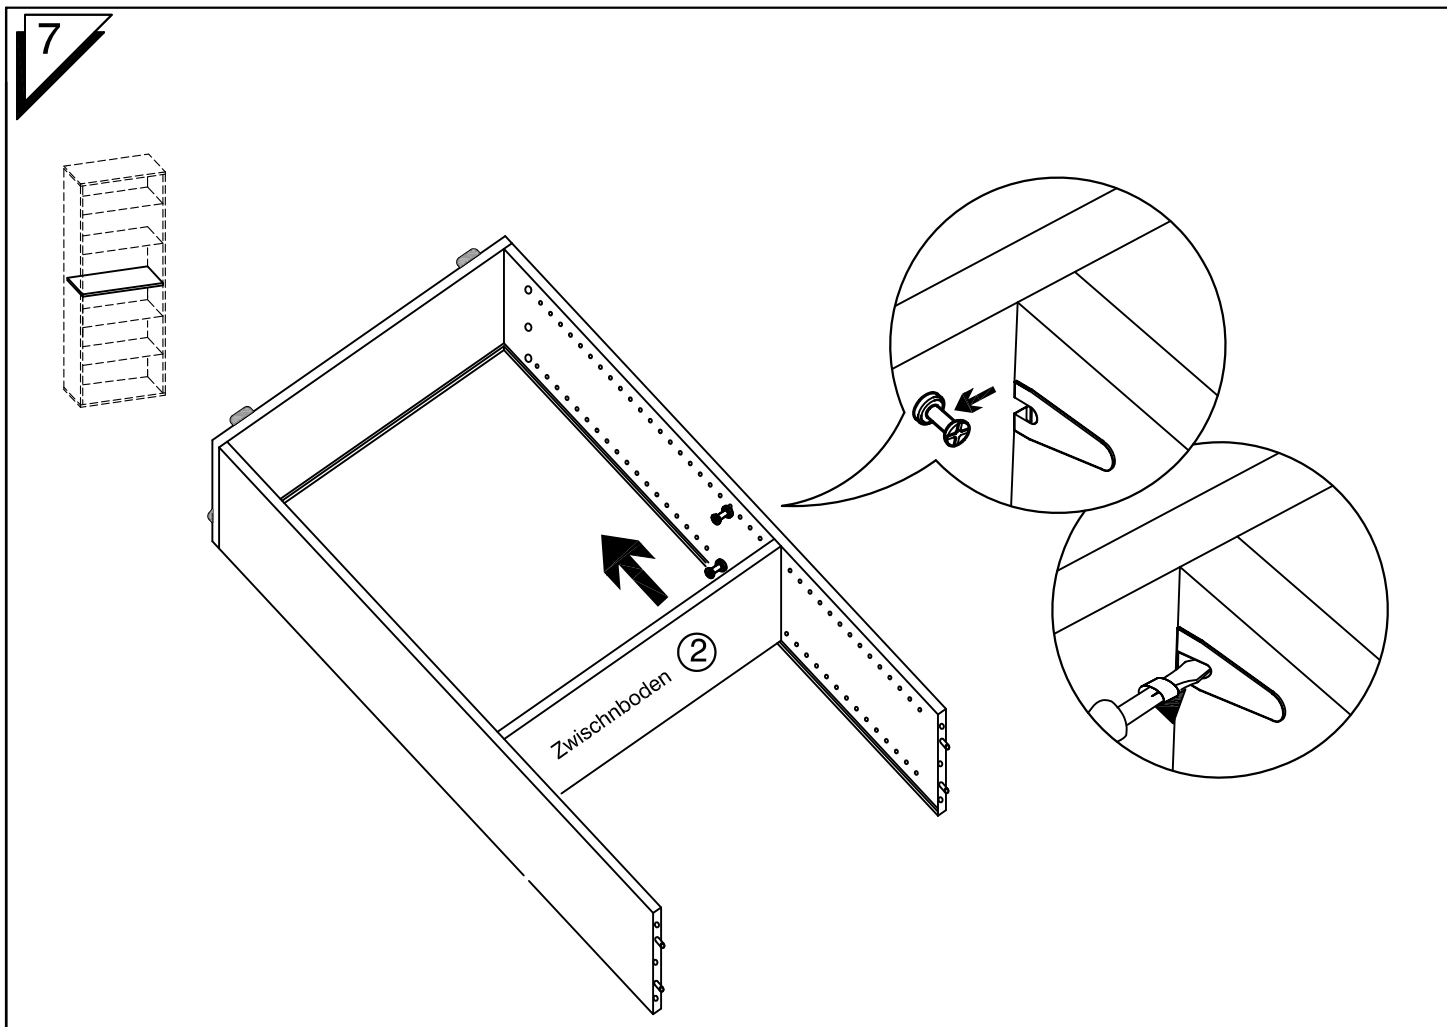




9

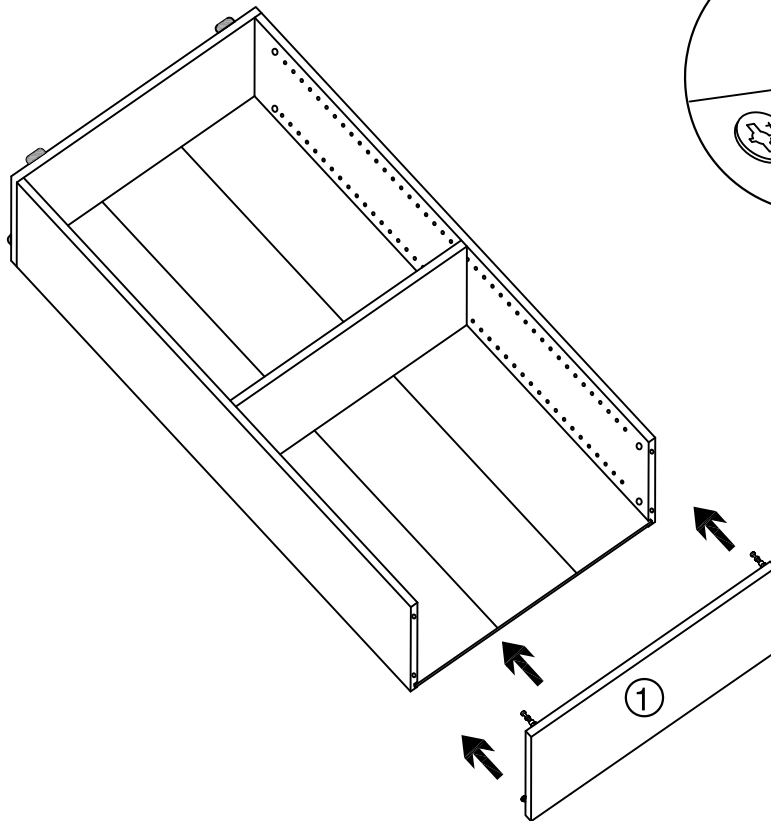






10

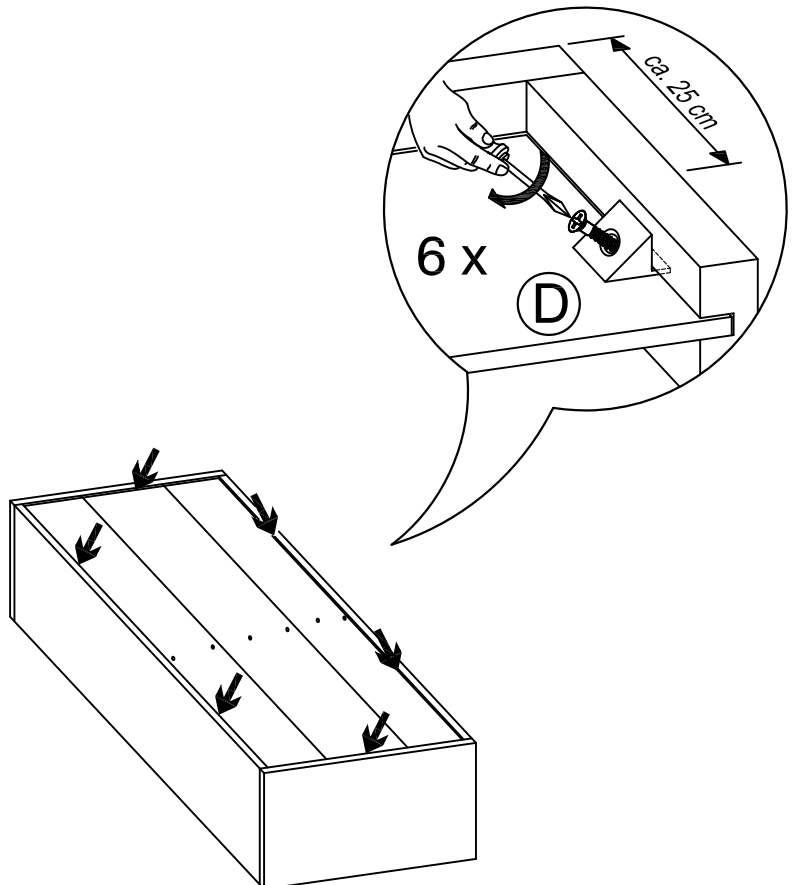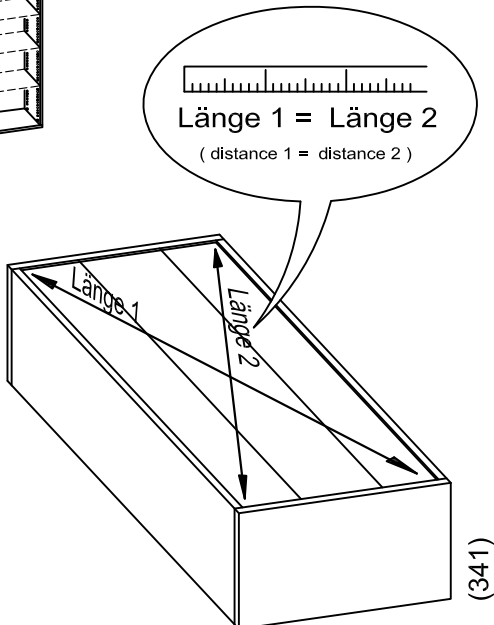




11

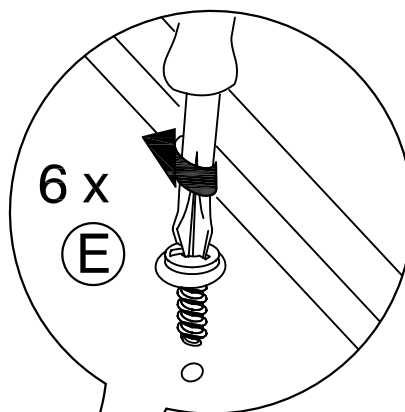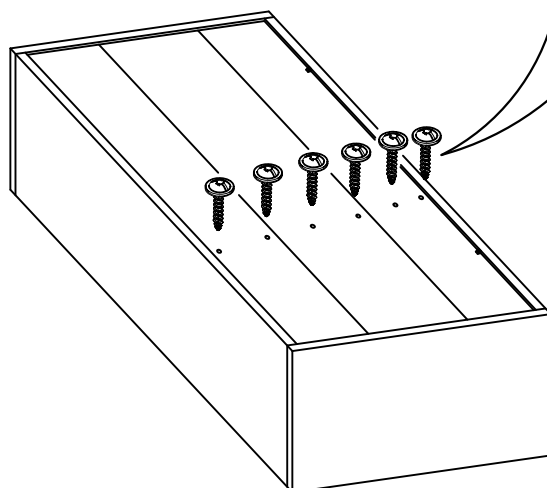

12

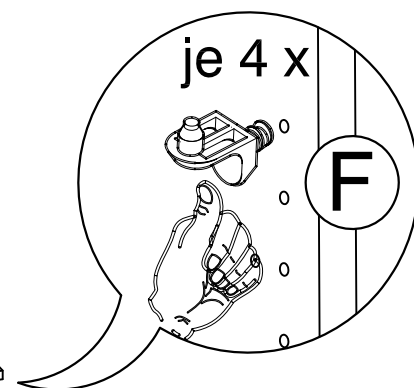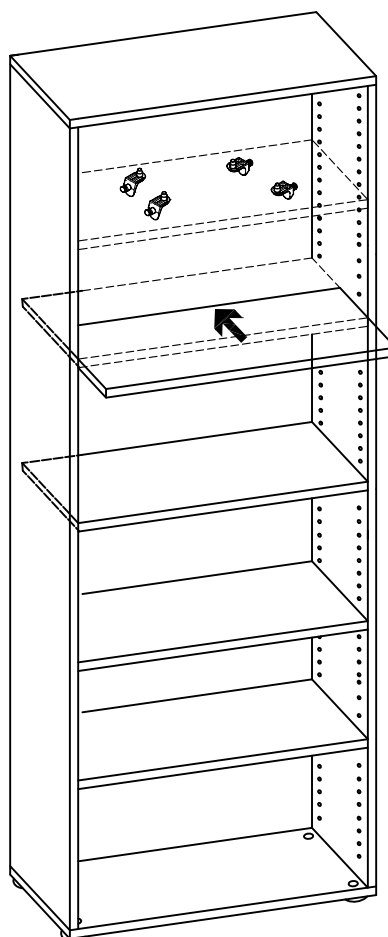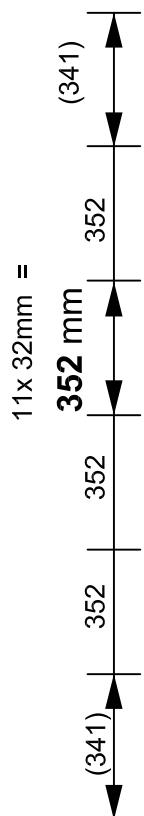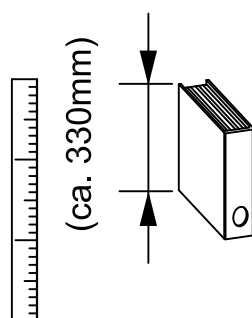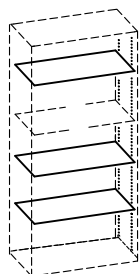

13

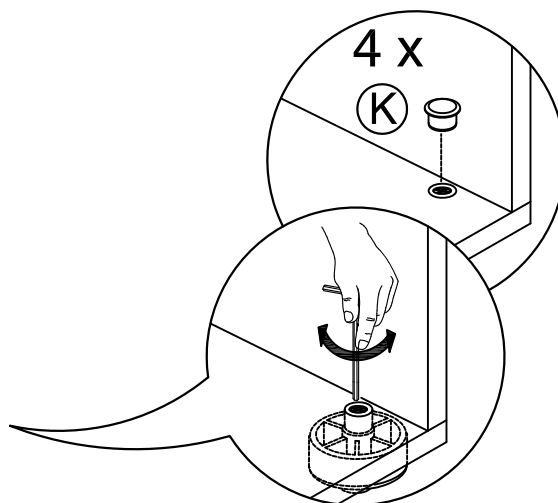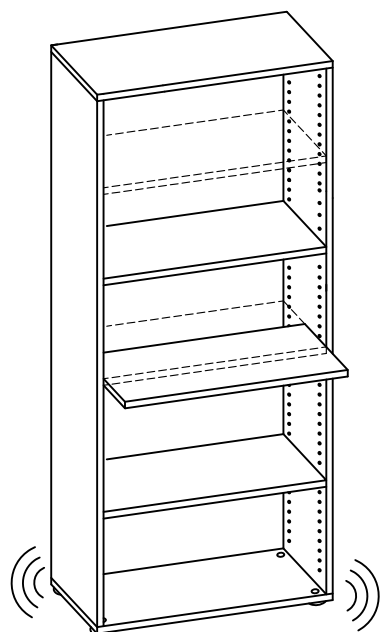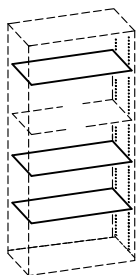

14

