

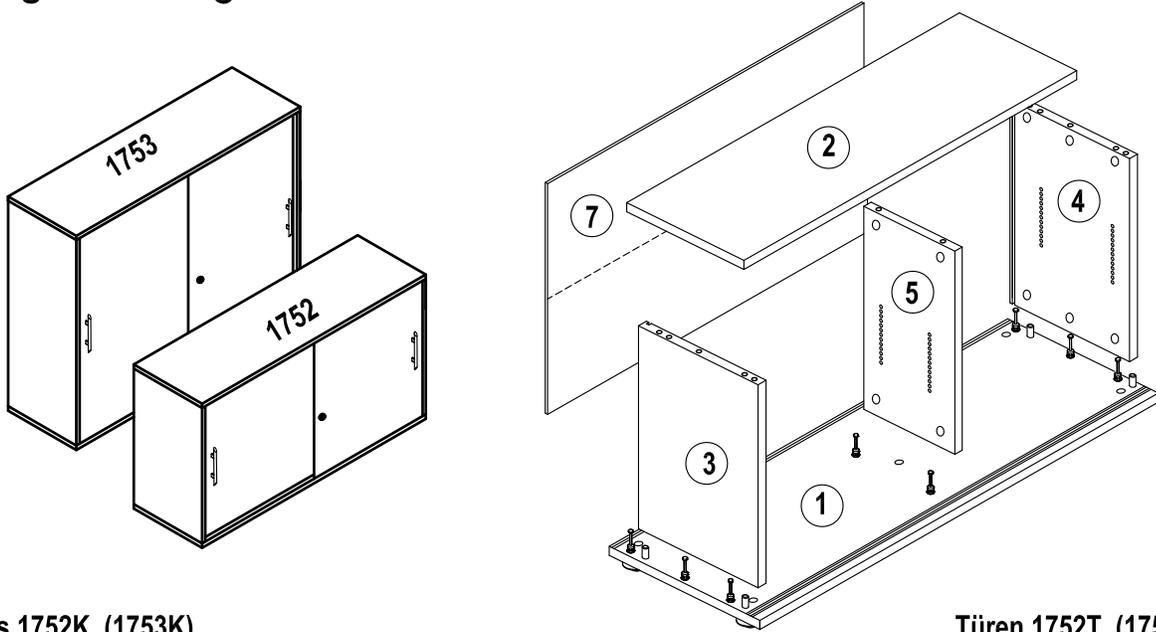









Montageanleitung : Schiebetürenschränk 1752 / 1753

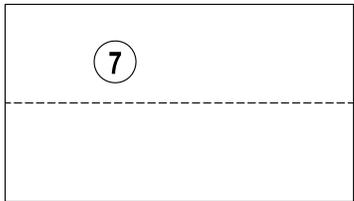

Korpus 1752K (1753K)



Türen 1752T (1753T)

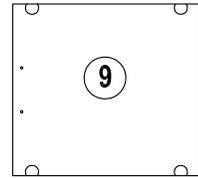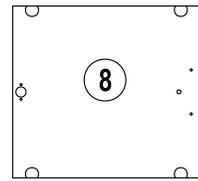

Beschlagbeutel Korpus (cabinet fittings)

5x (A) 500568 Fu 55mm	5x (B) 500547 Ab 14/18	16x (C) 500270 DU 325A	16x (D) 500359 EX 15/16	8x (E) 500578 8 x 30mm	4 (6)x (F) 500222 3,5 x 25mm	8 (16) x (G) 533771 DU 322
-------------------------------------	--------------------------------------	--------------------------------------	---------------------------------------	--------------------------------------	--	--




Beschlagbeutel Griffe




Beschlagbeutel Türen (doors fittings)

2x (H) o.ä. (Je nach Griffvariante)	4x (I) o.ä. (Je nach Griffvariante)	1x (J) 500346	1x (K) 500289	2x (L) 500219 3,5 x 16mm	1x (M) 500291 19mm	4x (N) 500453
---	---	-----------------------------	-----------------------------	--	----------------------------------	-----------------------------


Beschlagbeutel Schränke (cabinet fittings)

5x (O) (M4 x 20 mm)	3x (P) (M4 x 35 mm)	2x (Q) (M4 x 27 mm)
-----------------------------------	-----------------------------------	-----------------------------------

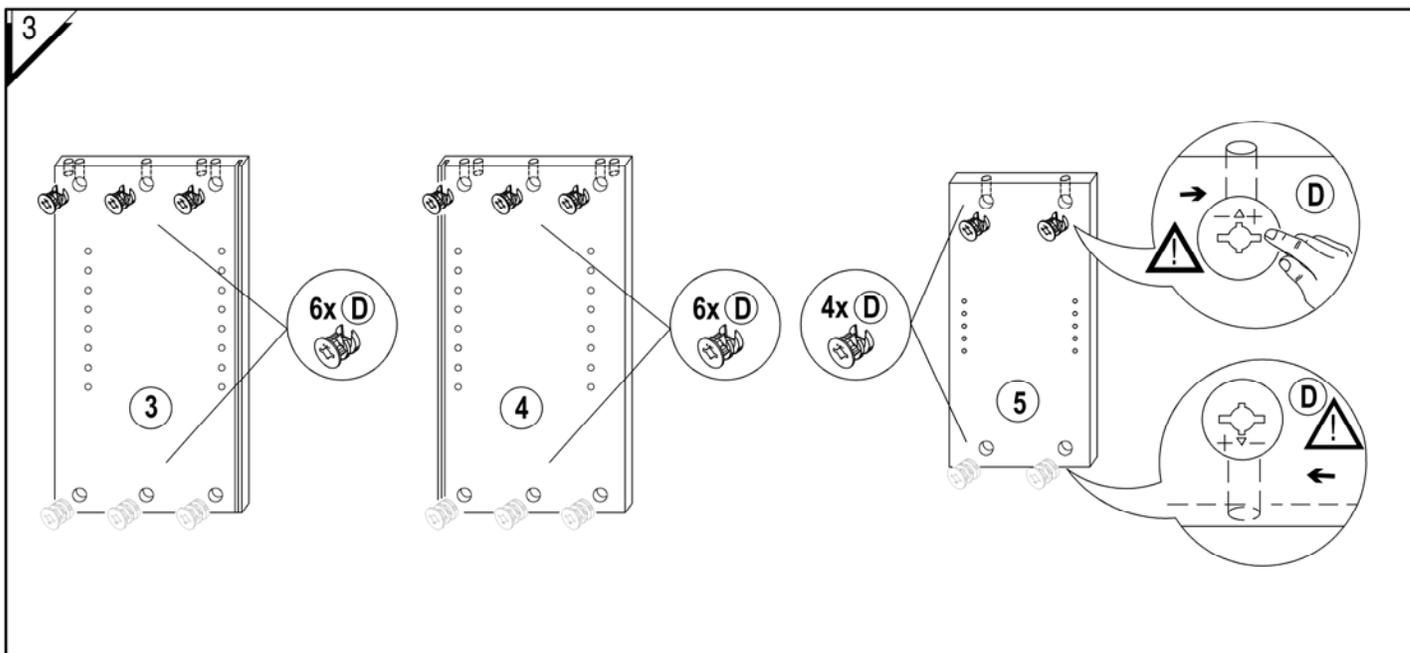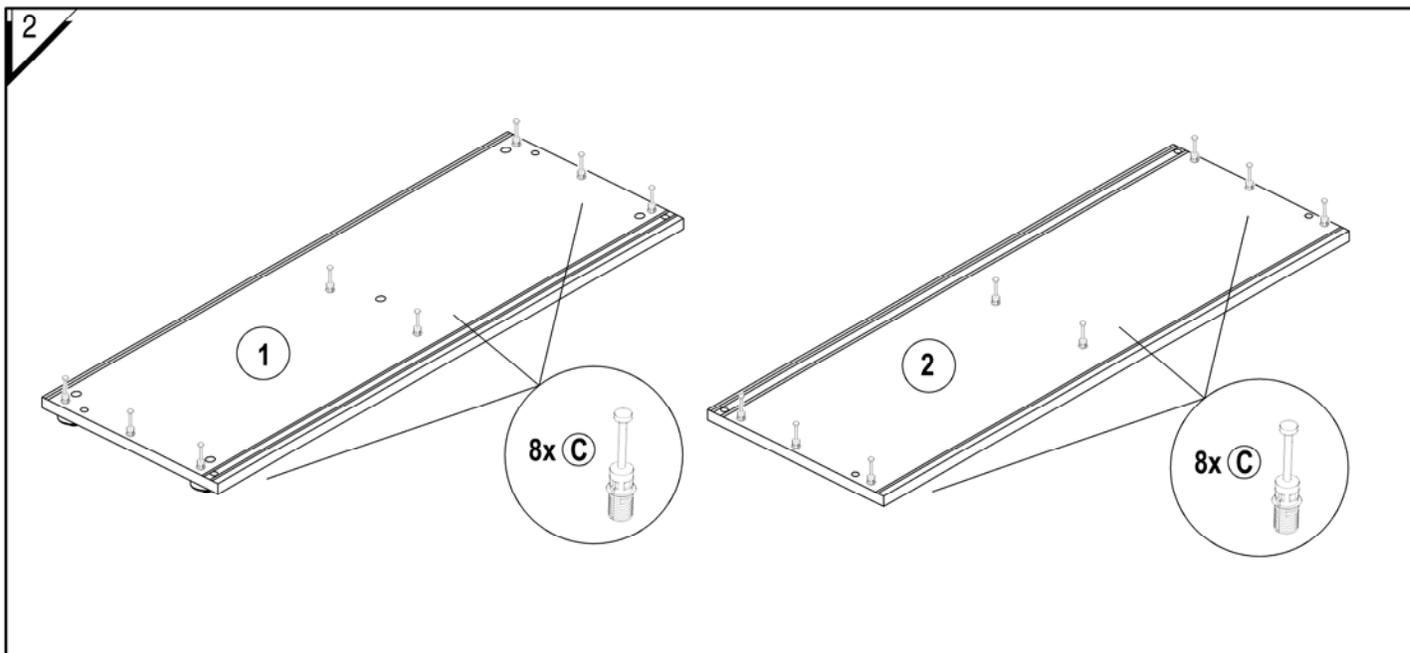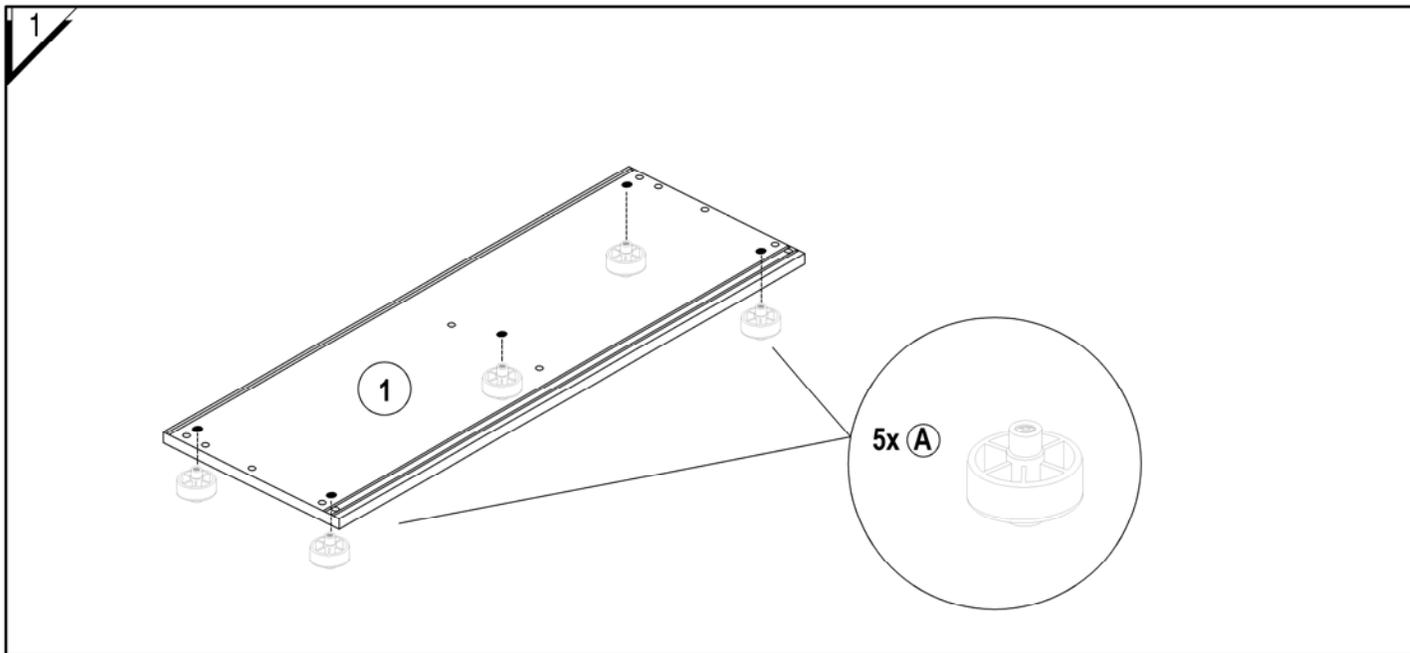


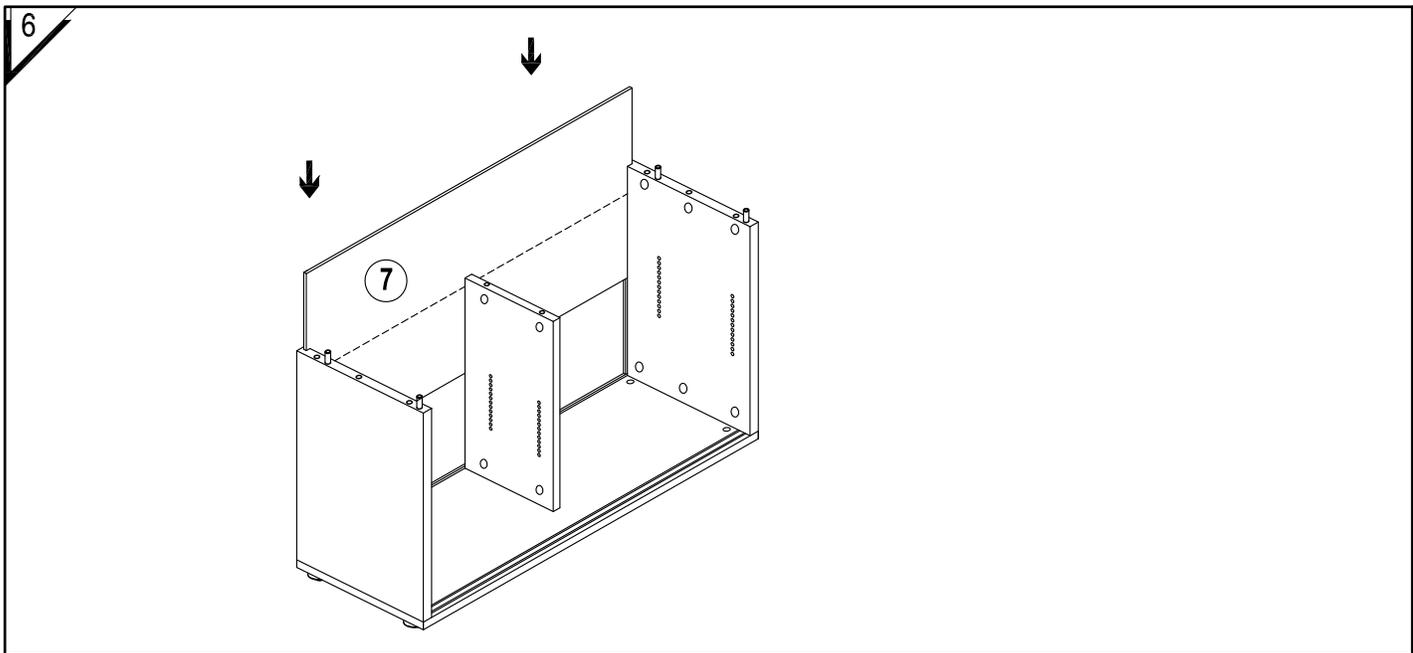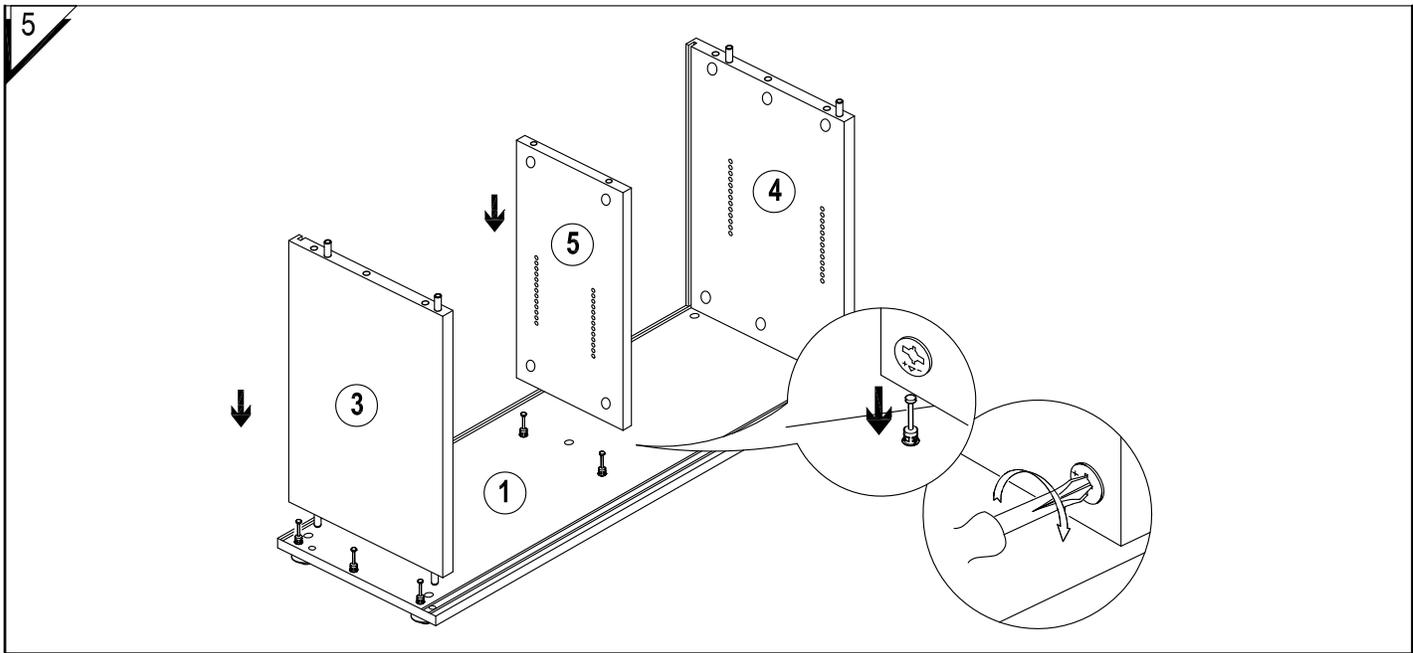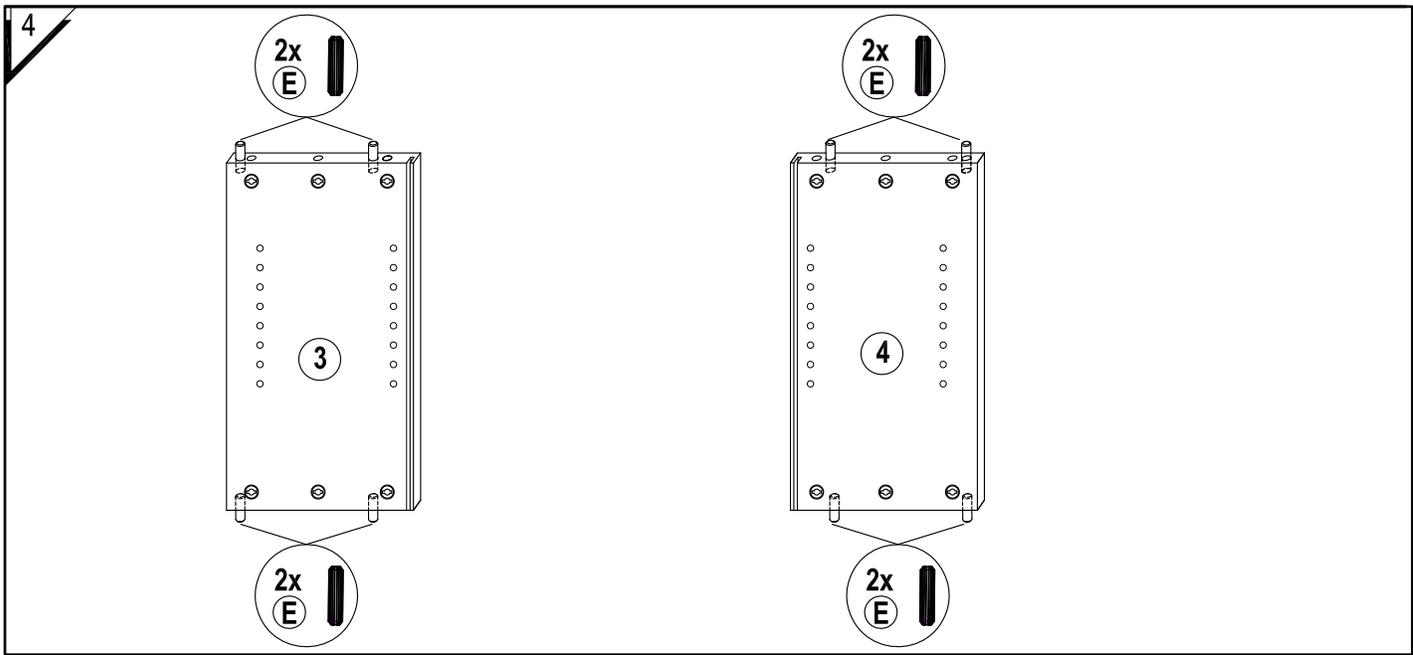


7

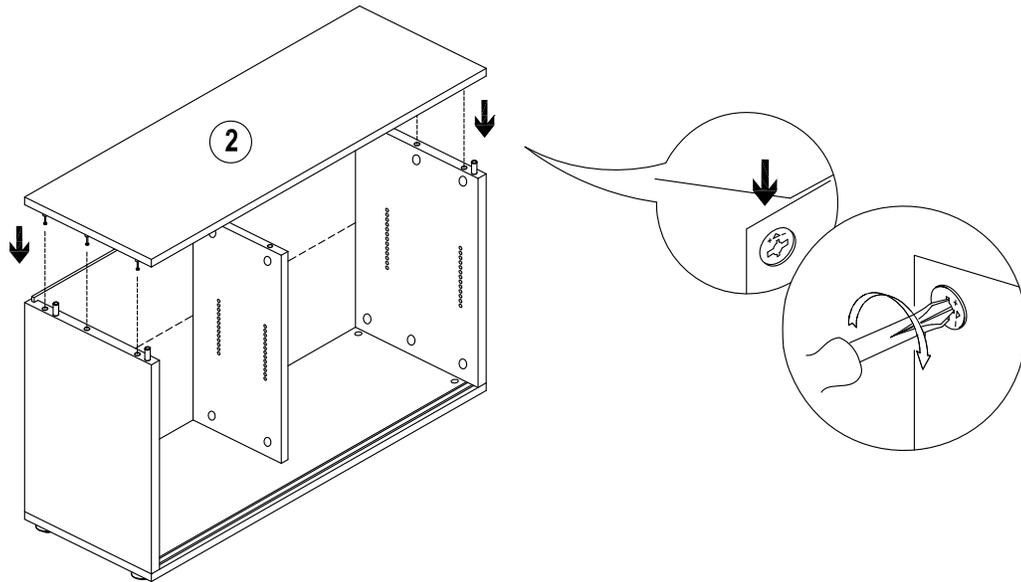


8

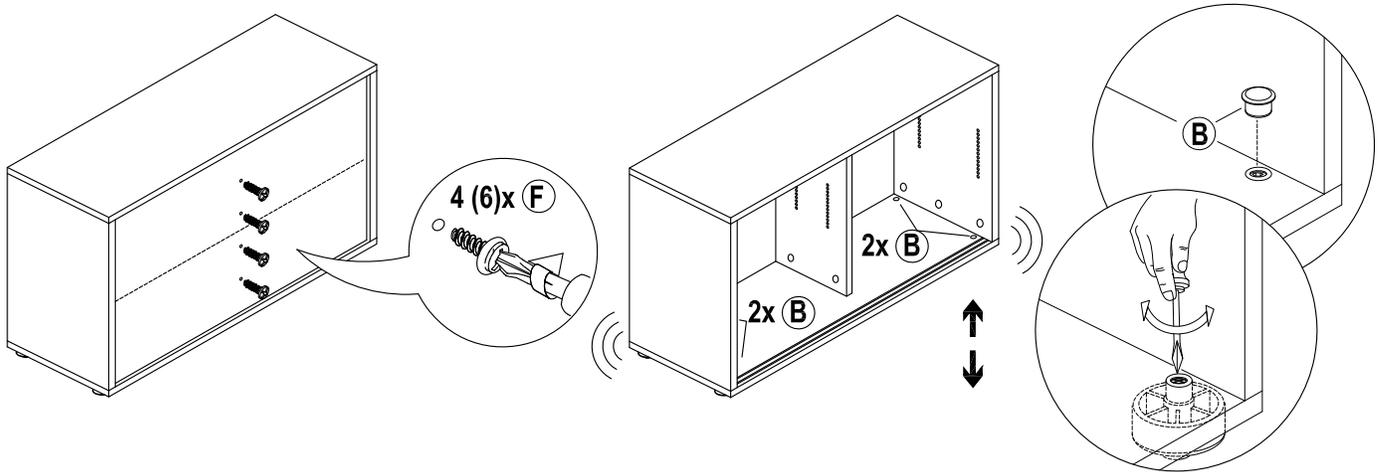


9

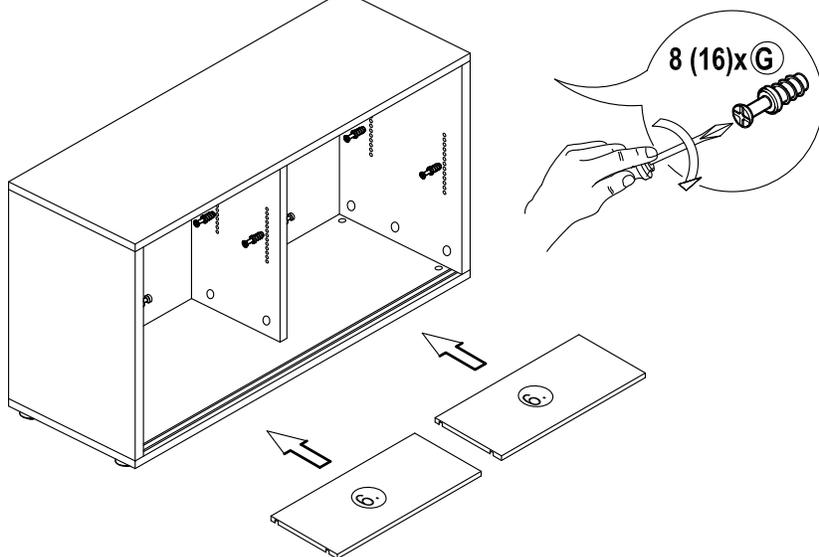


10

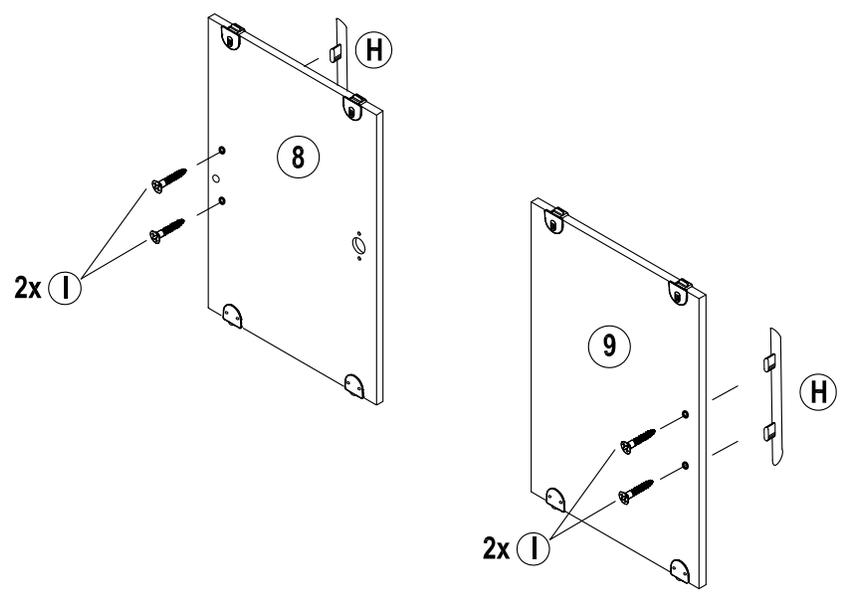


11

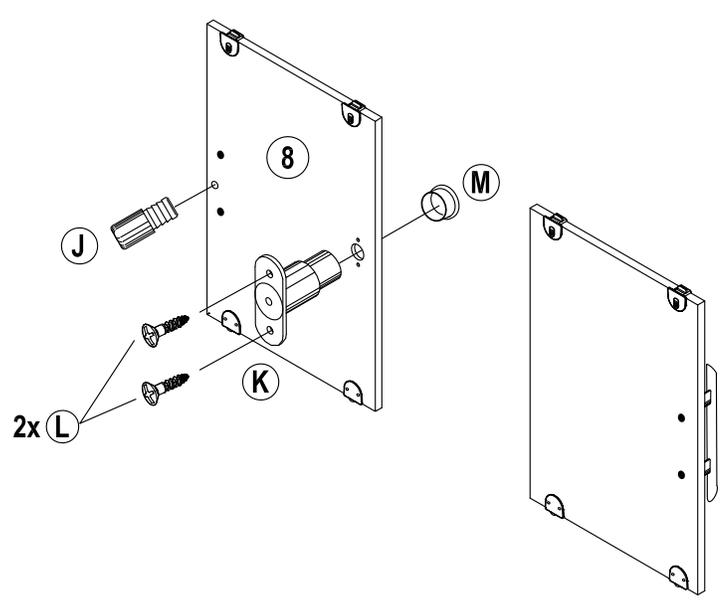


12

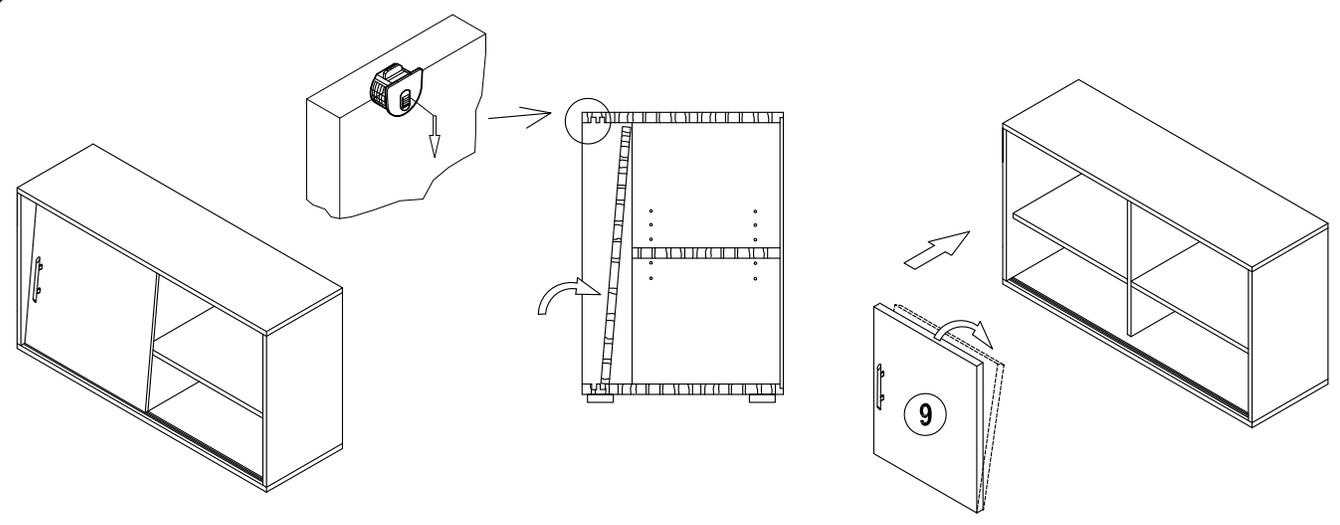

13

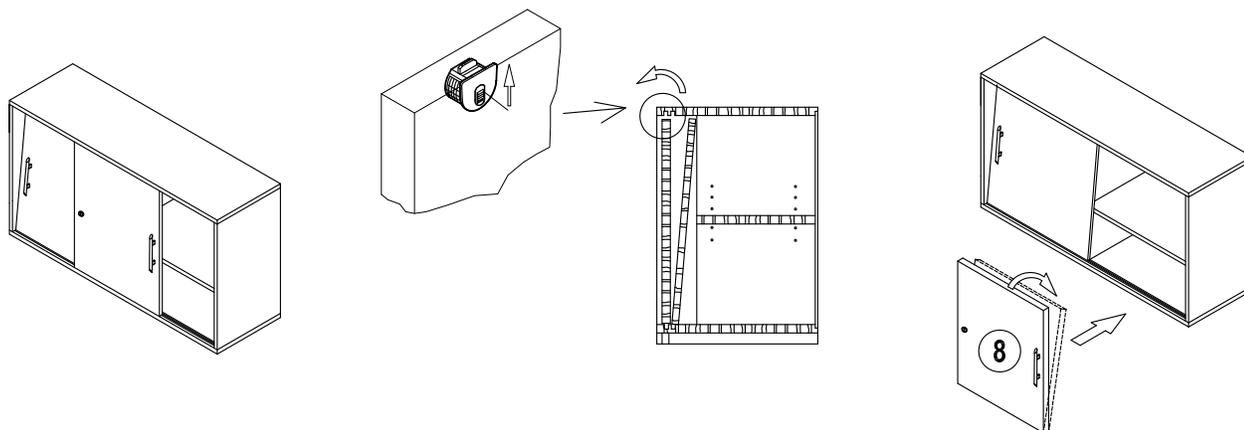

14

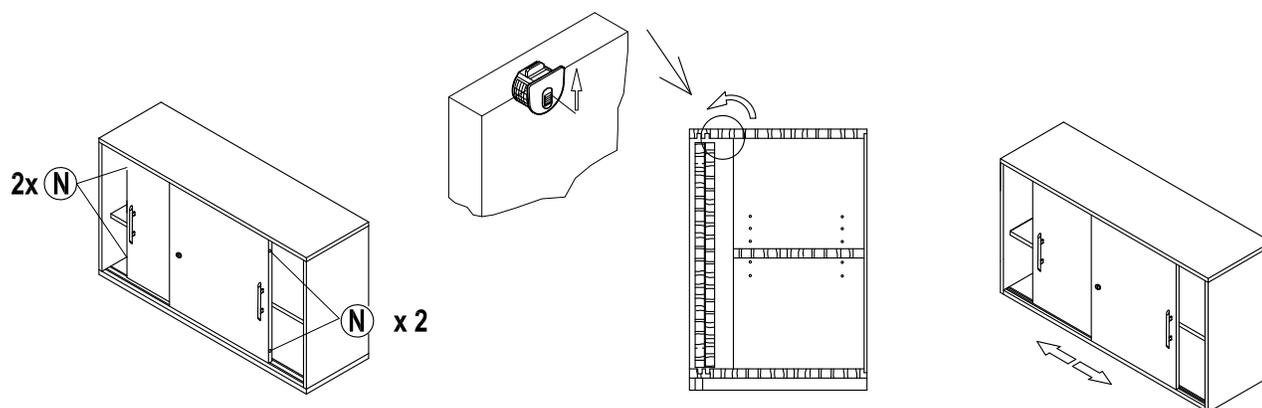

15

