

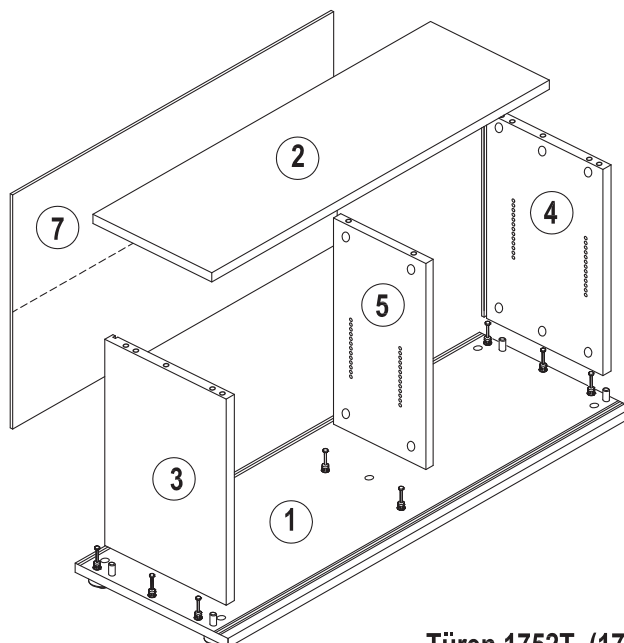
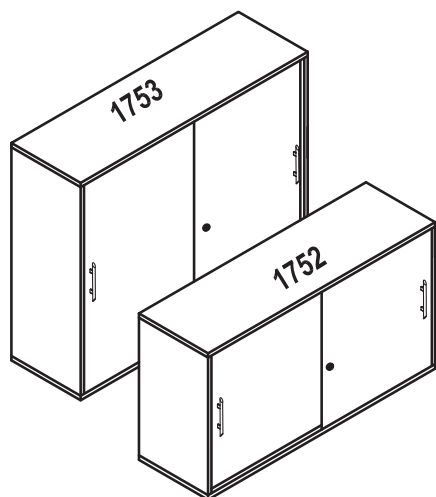


Montageanleitung : Schiebetürenschränk 1752 / 1753


Stand: 05/2018

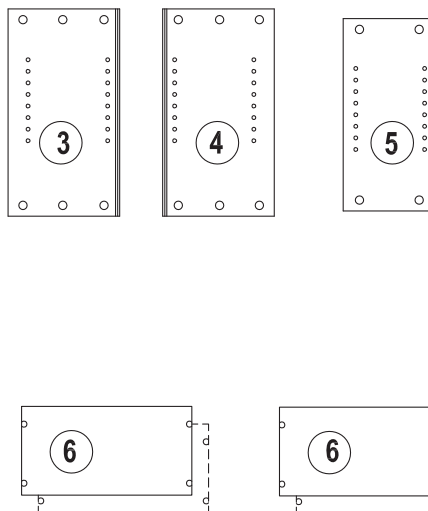


Korpus 1752K (1753K)

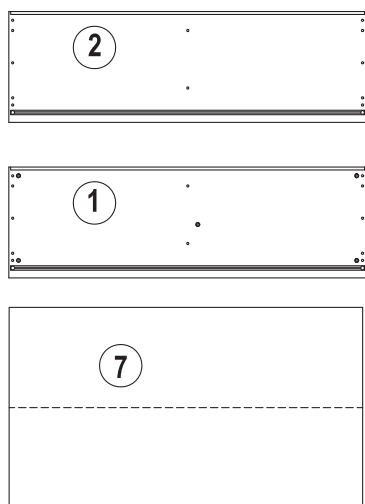

Türen 1752T (1753T)

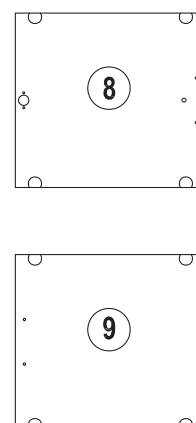


Beschlagbeutel Korpus (cabinet fittings)

5x A  500568 Fu 55mm	5x B  500547 Ab 14/18	16x C  500270 DU 325A	16x D  500359 EX 15/16	8x E  500578 8 x 30mm	4 (6)x F  500222 3,5 x 25mm	8 (16) x G  533771 DU 322
--	---	---	--	---	---	---




Beschlagbeutel Griffe




Beschlagbeutel Türen (doors fittings)




2x H o.ä.  (Je nach Griffvariante)	4x I o.ä. 	1x J  500346	1x K  568235	2x L  500219 3,5 x 16mm	1x M  568236 22mm	4x N  500453
--	---	--	--	--	---	--

Beschlagbeutel Schränke (cabinet fittings)


5x O  (M4 x 20 mm)	3x P  (M4 x 35 mm)	2x Q  (M4 x 27 mm)
--	--	--

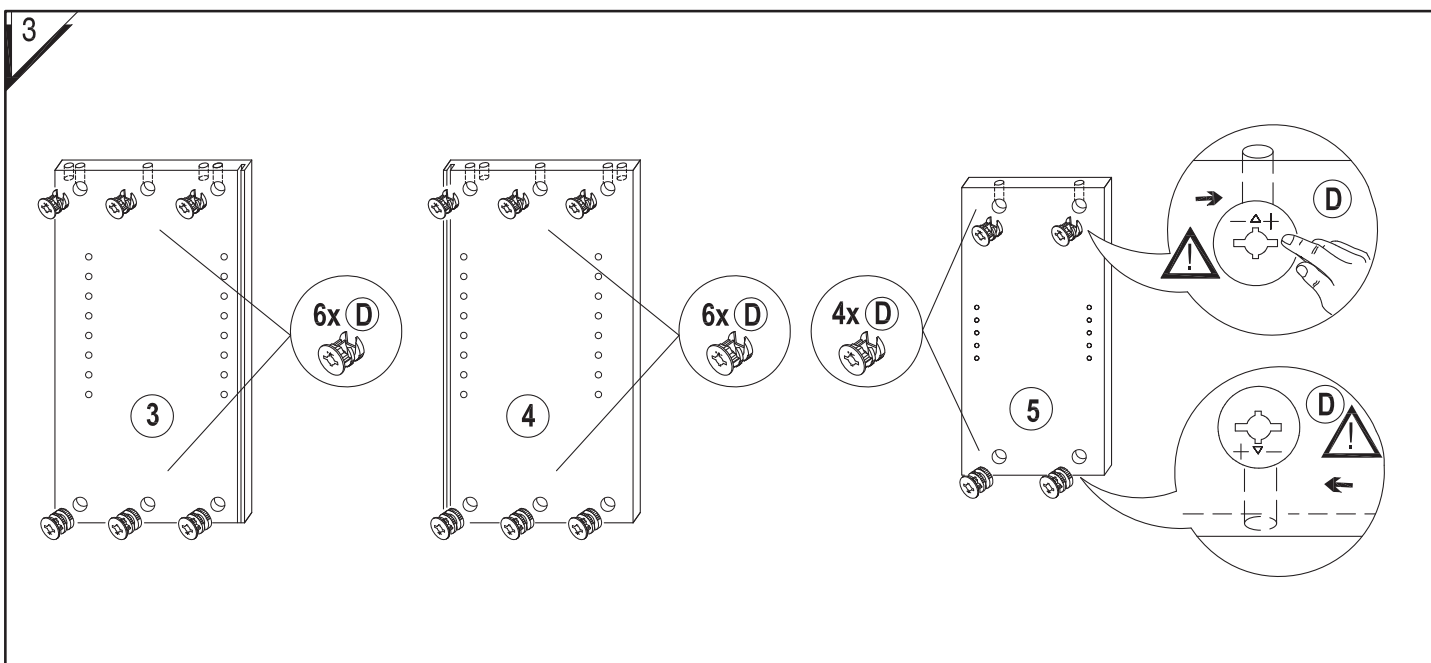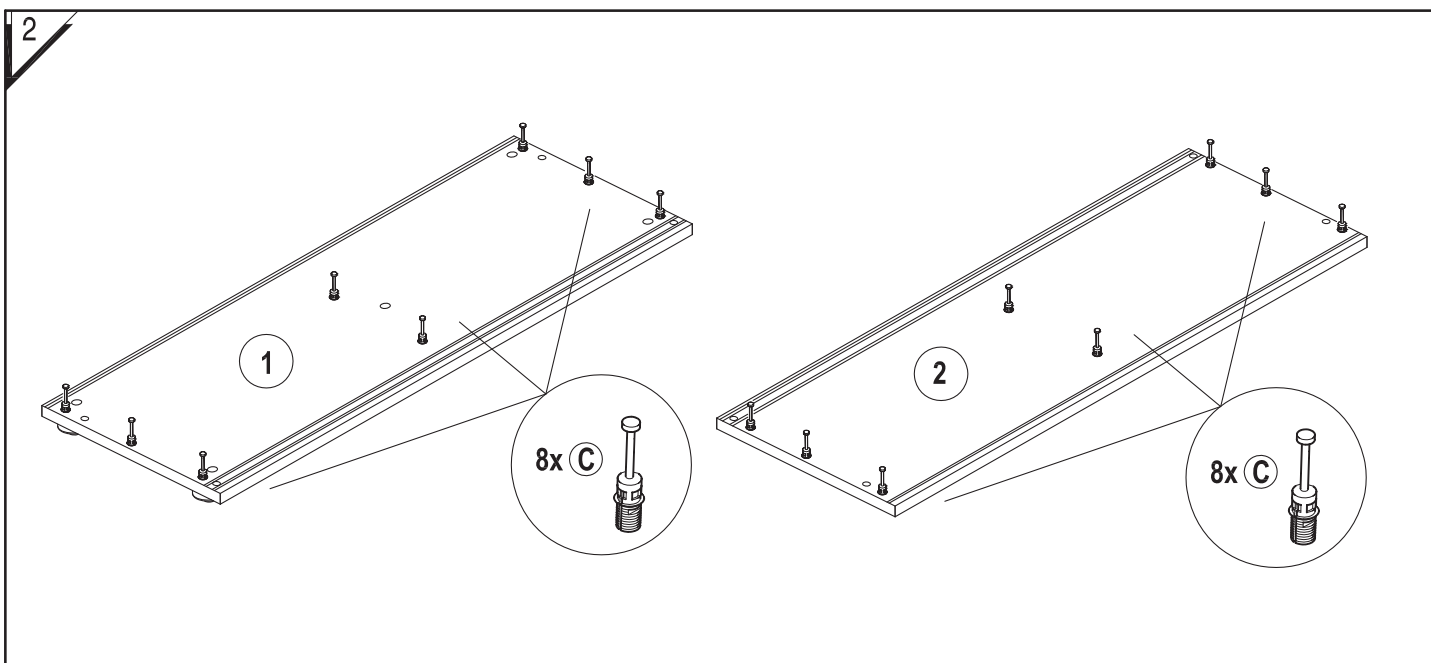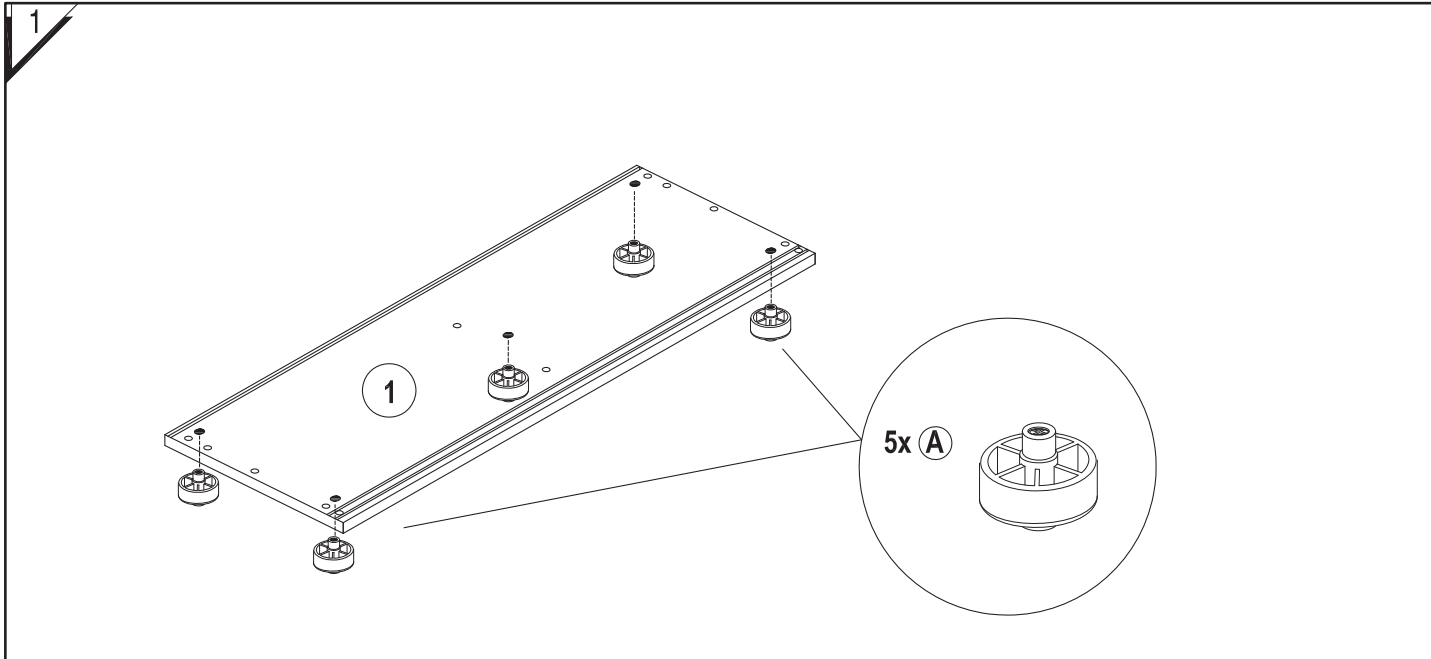

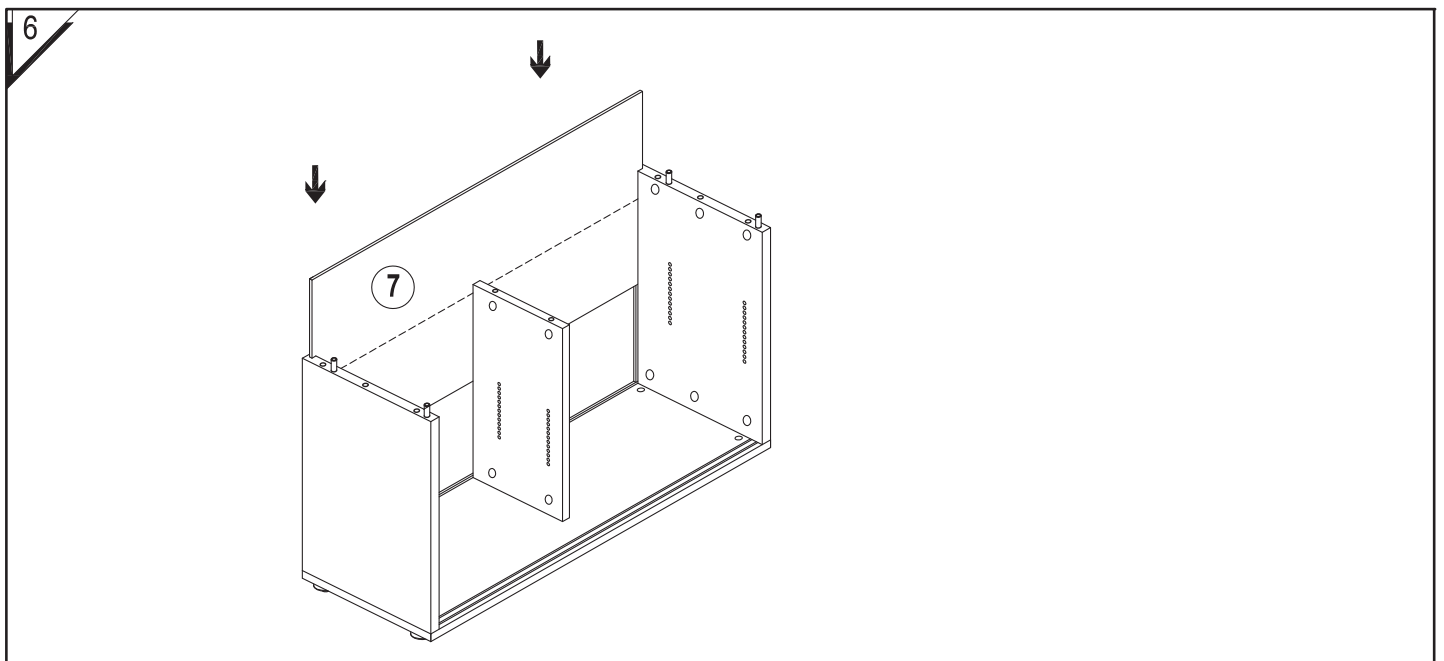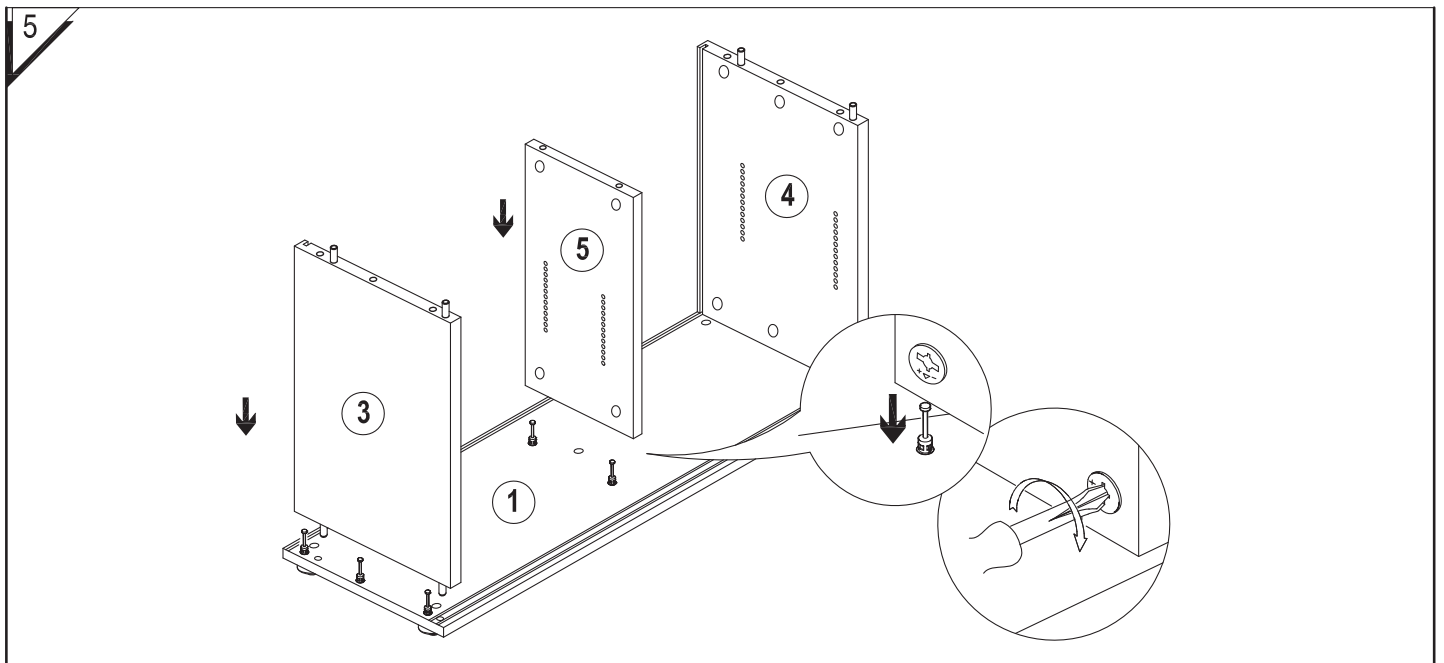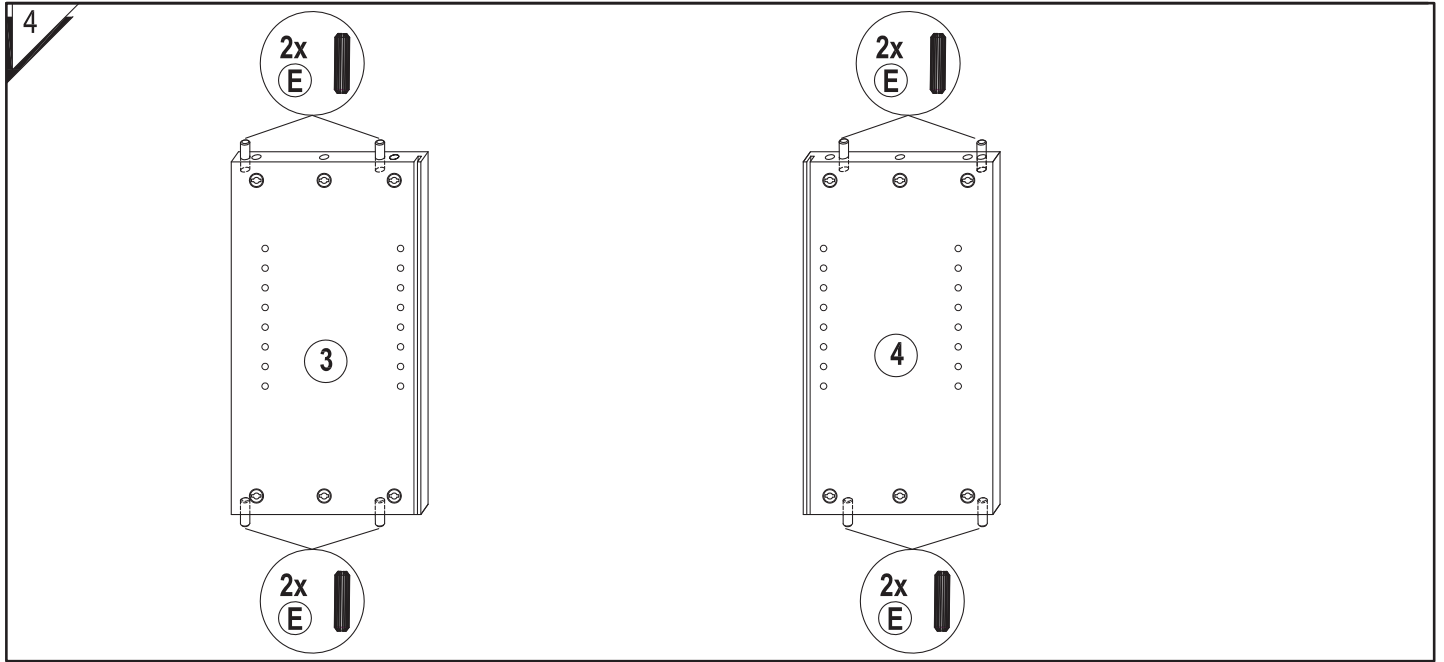


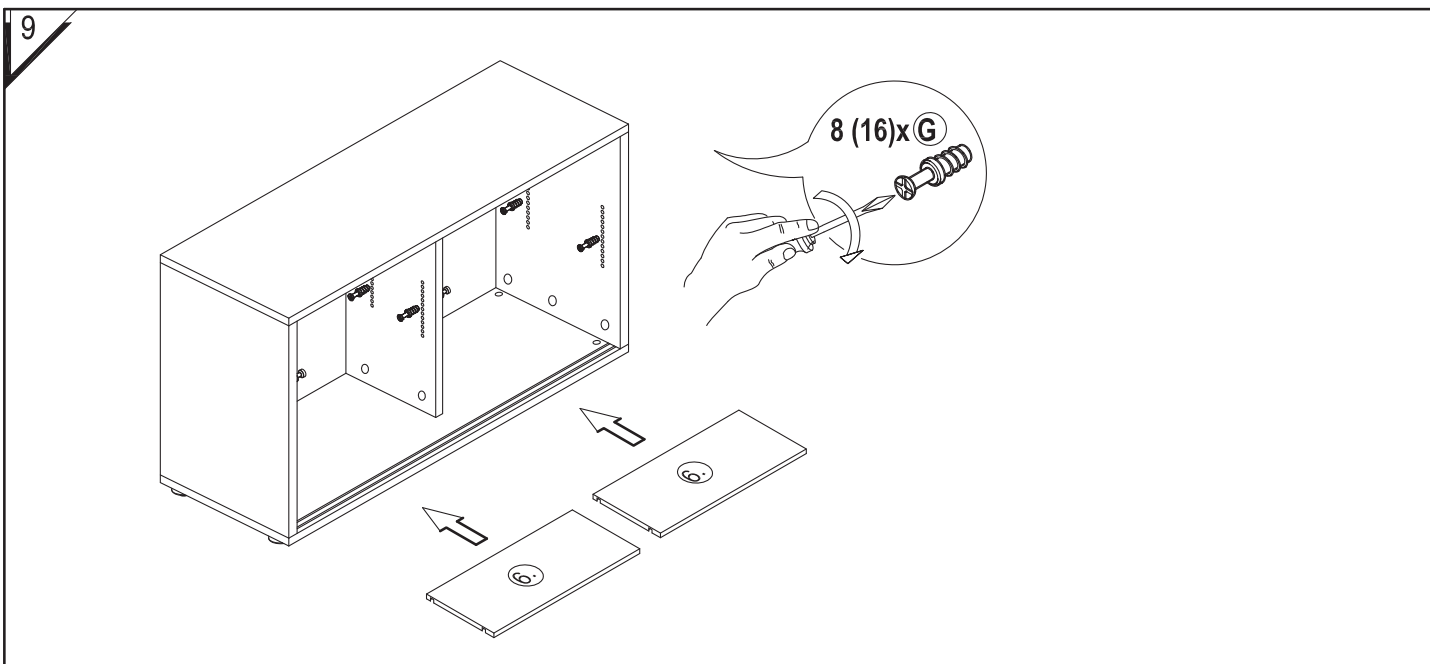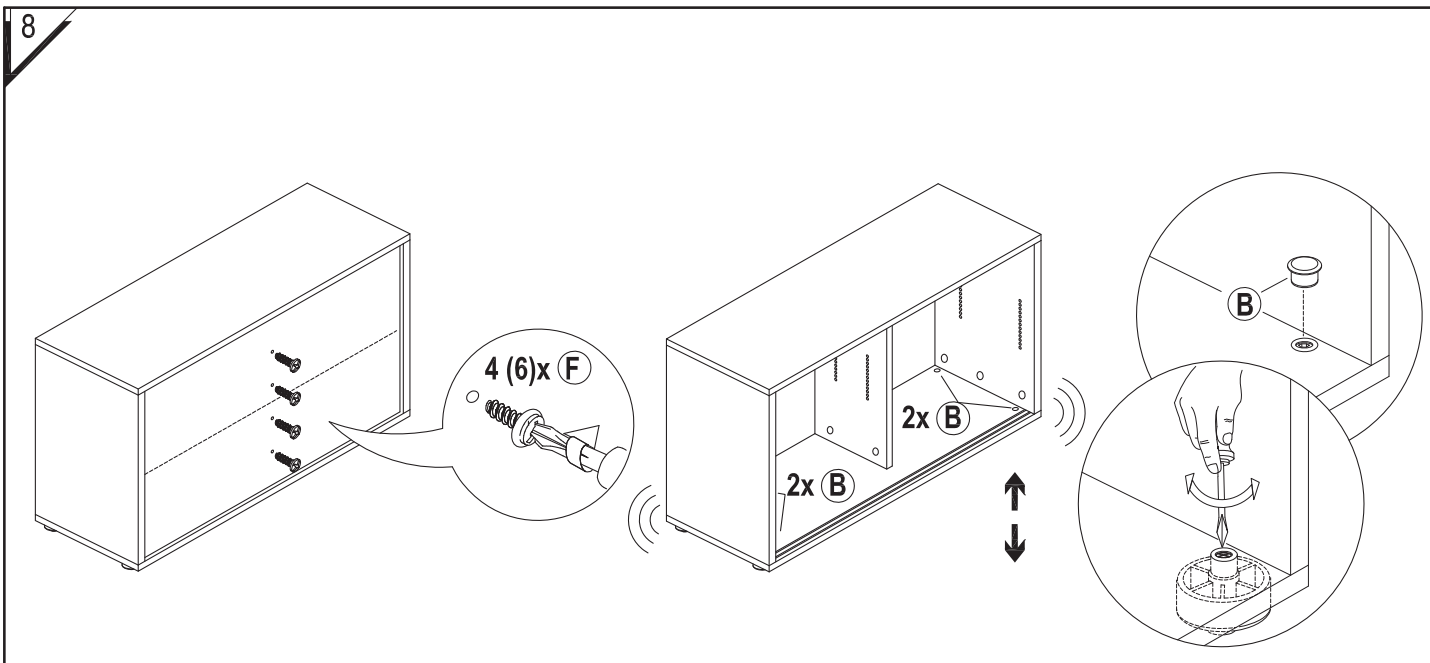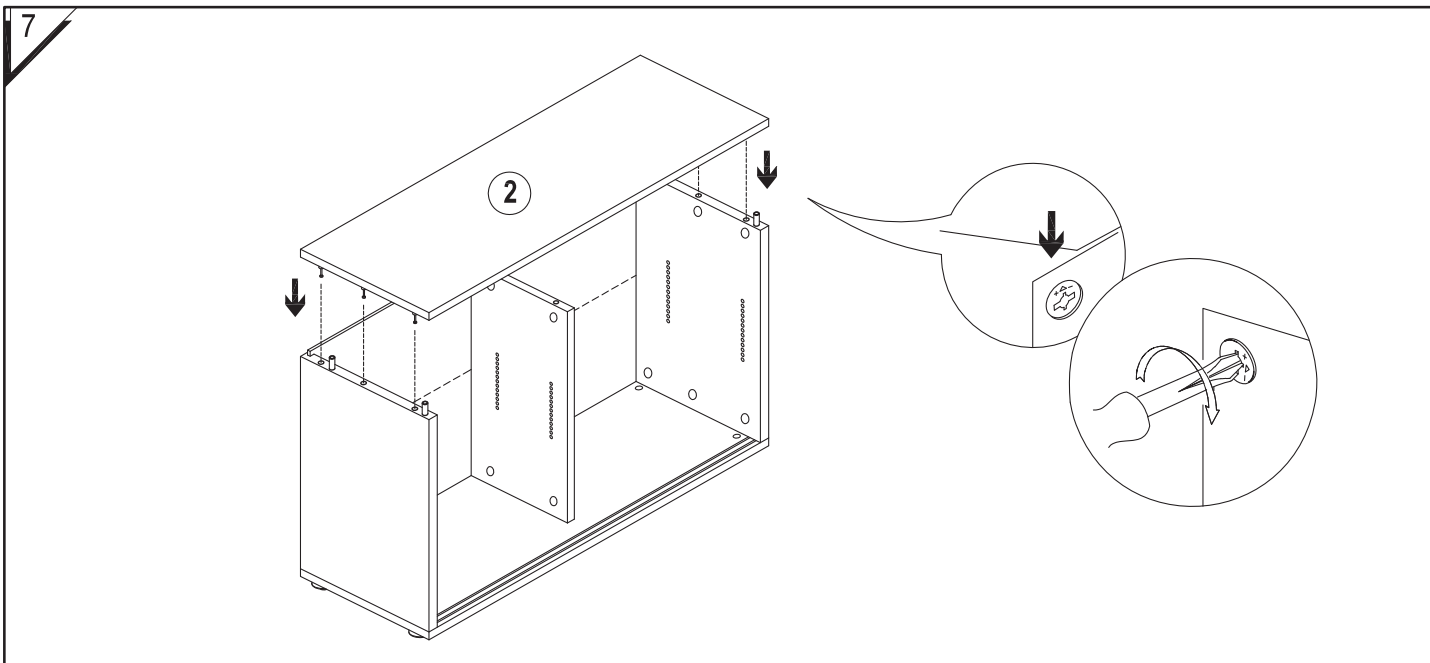


10

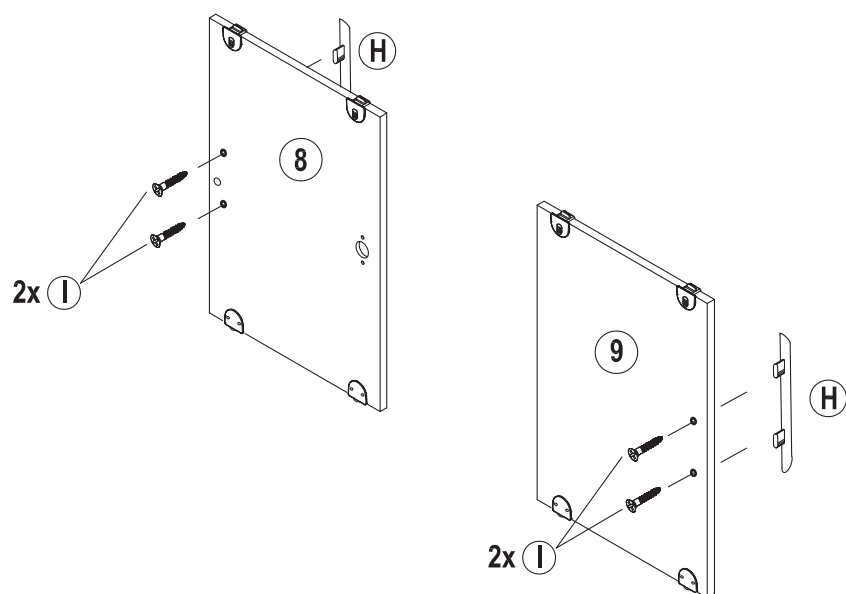


11

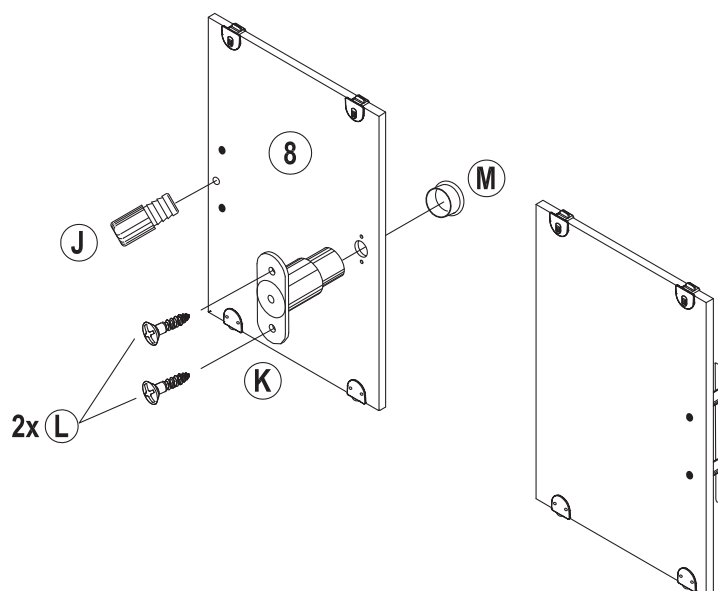


12

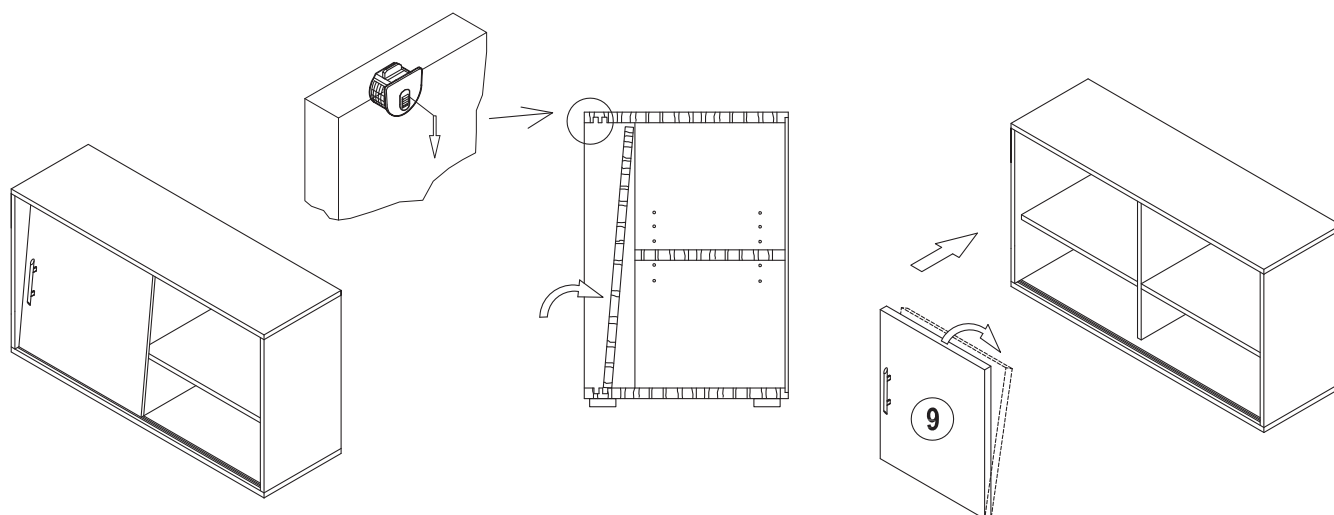

13

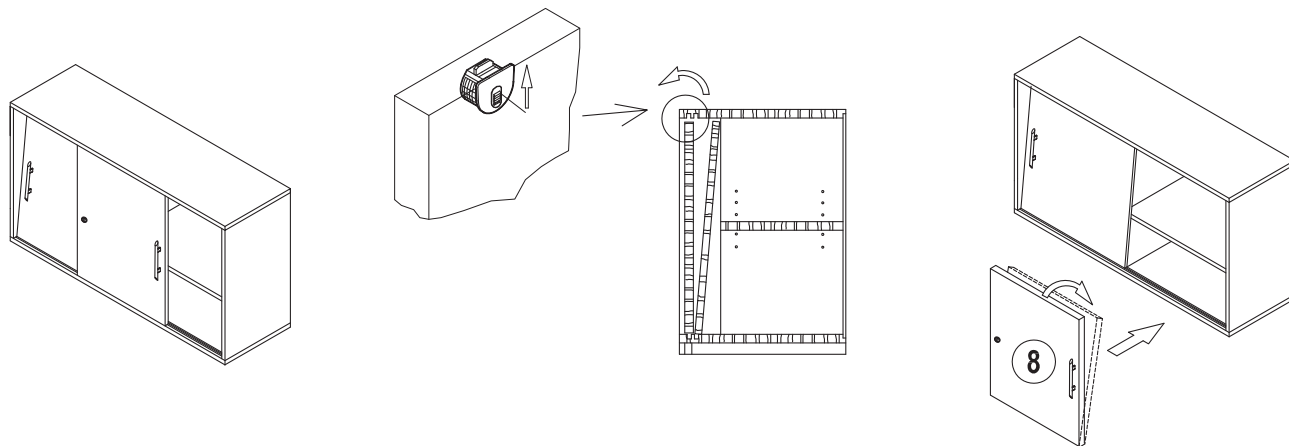

14

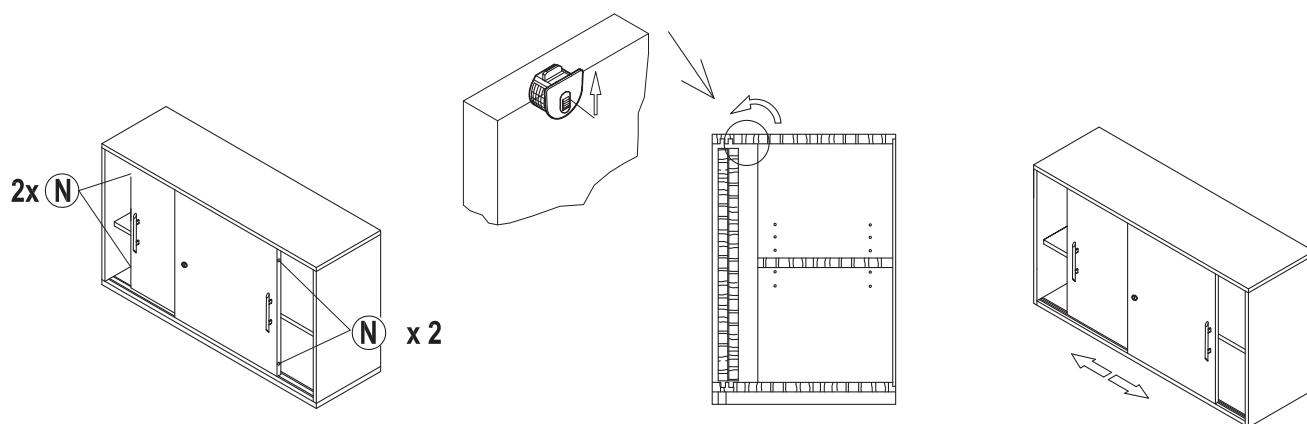

15

