

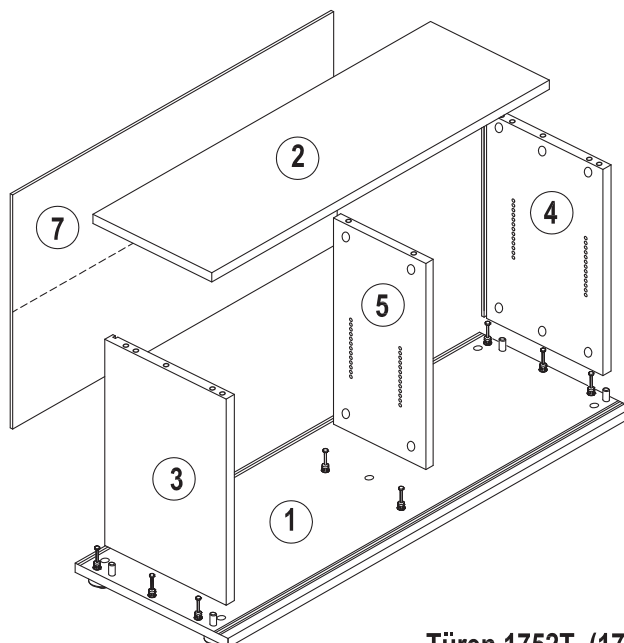
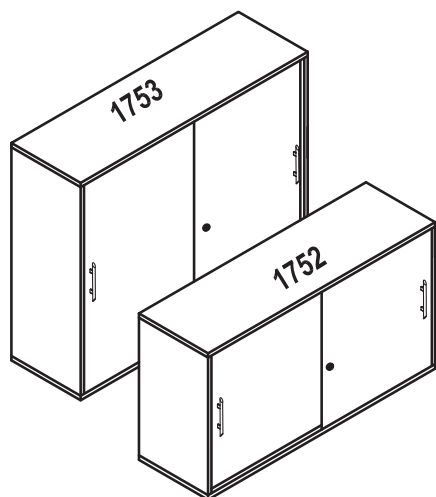


Montageanleitung : Schiebetürenschrank 1752 / 1753


Stand: 05/2018

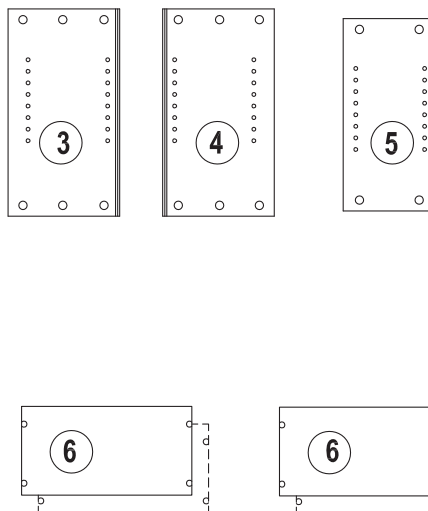

Korpus 1752K (1753K)

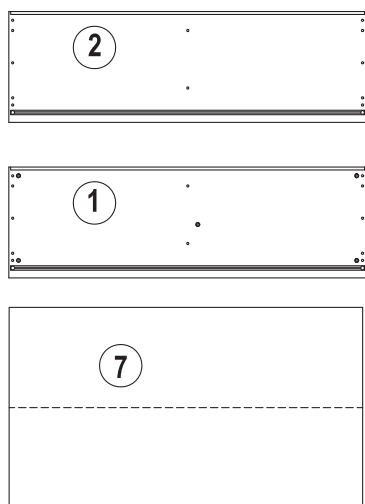

Türen 1752T (1753T)

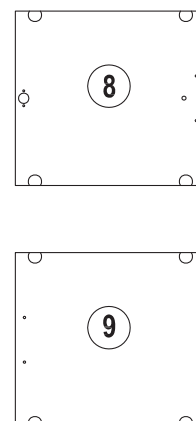

Beschlagbeutel Korpus (cabinet fittings)

5x A 500568 Fu 55mm	5x B 500547 Ab 14/18	16x C 500270 DU 325A	16x D 500359 EX 15/16	8x E 500578 8 x 30mm	4 (6)x F 500222 3,5 x 25mm	8 (16) x G 533771 DU 322
-----------------------------------	------------------------------------	------------------------------------	-------------------------------------	------------------------------------	--	--




Beschlagbeutel Griffe




Beschlagbeutel Türen (doors fittings)




2x H o.ä. (Je nach Griffvariante)	4x I o.ä. (Je nach Griffvariante)	1x J 500346	1x K 568235	2x L 500219 3,5 x 16mm	1x M 568236 22mm	4x N 500453
---	---	---------------------------	---------------------------	--------------------------------------	--------------------------------	---------------------------

Beschlagbeutel Schränke (cabinet fittings)


5x O (M4 x 20 mm)	3x P (M4 x 35 mm)	2x Q (M4 x 27 mm)
---------------------------------	---------------------------------	---------------------------------

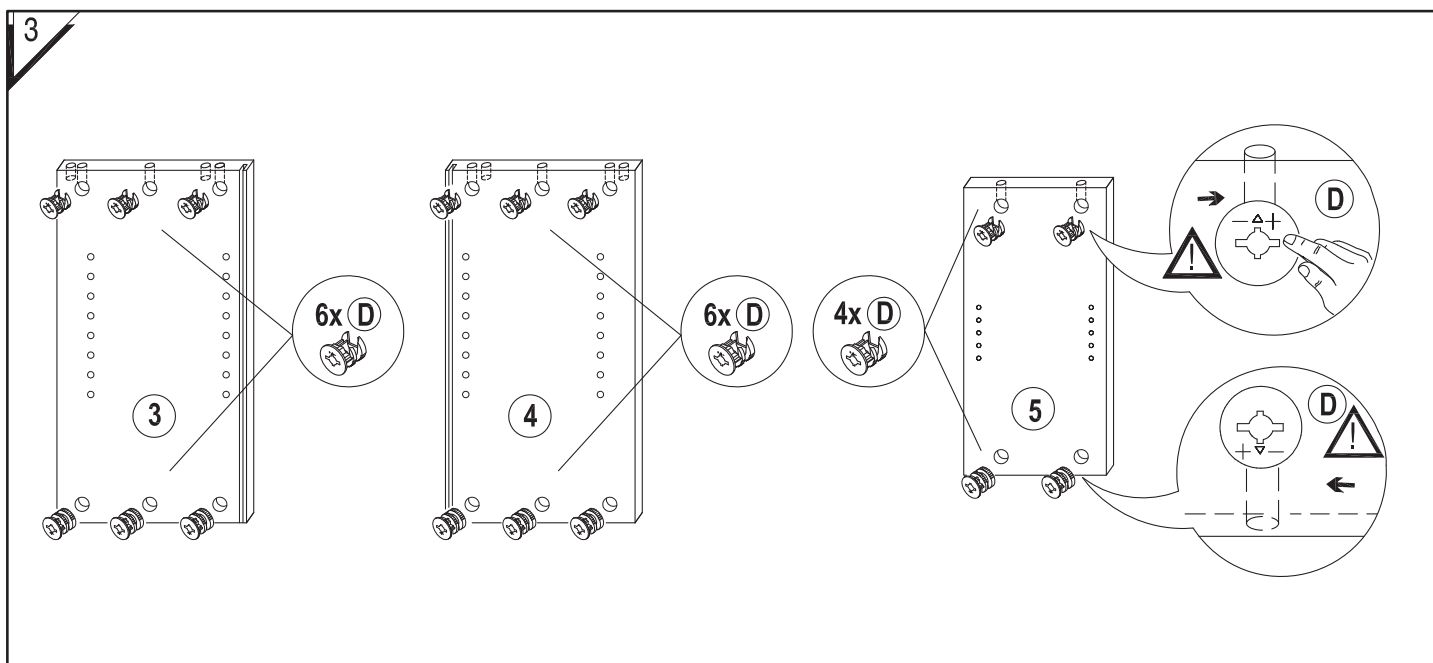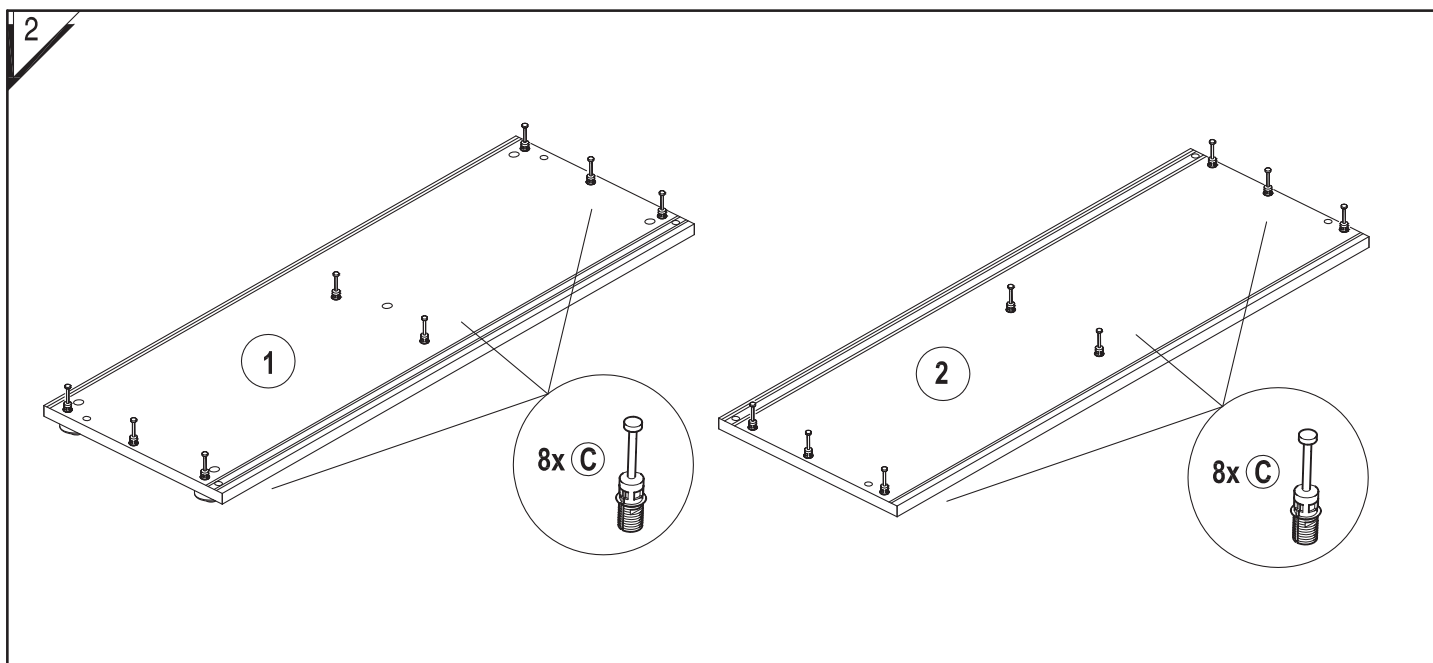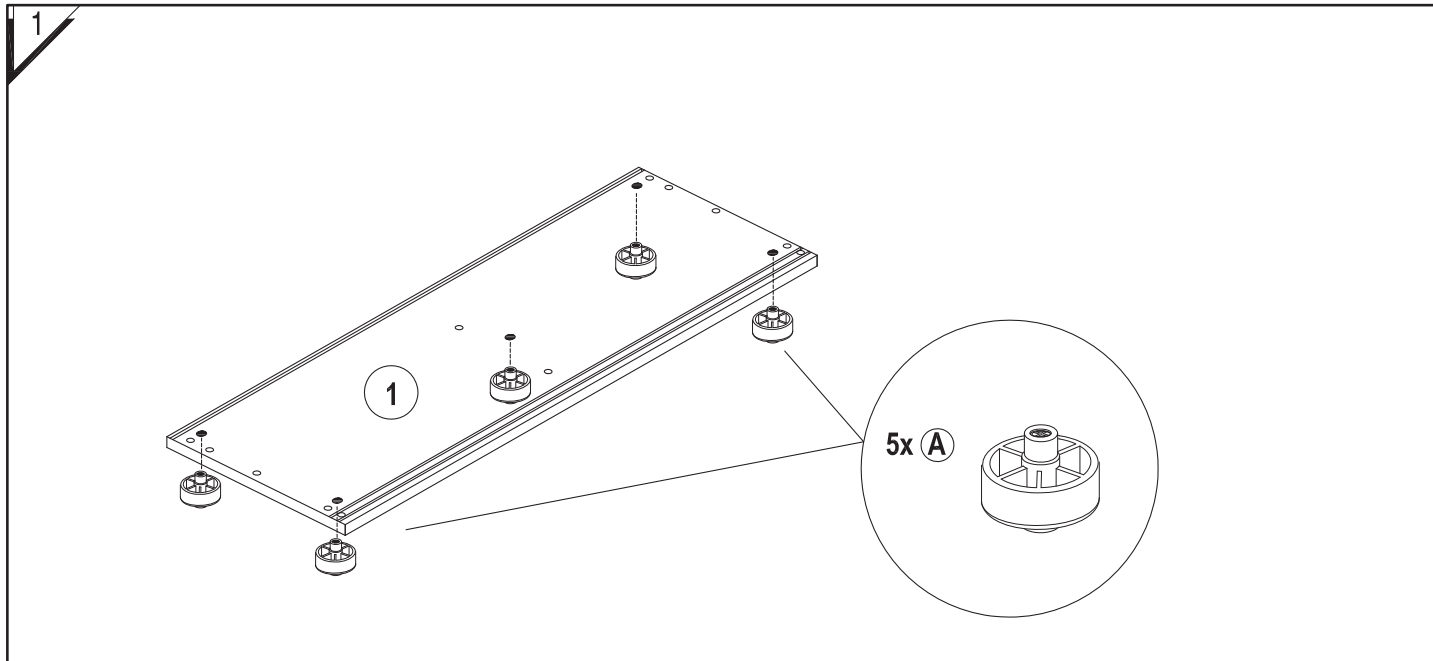

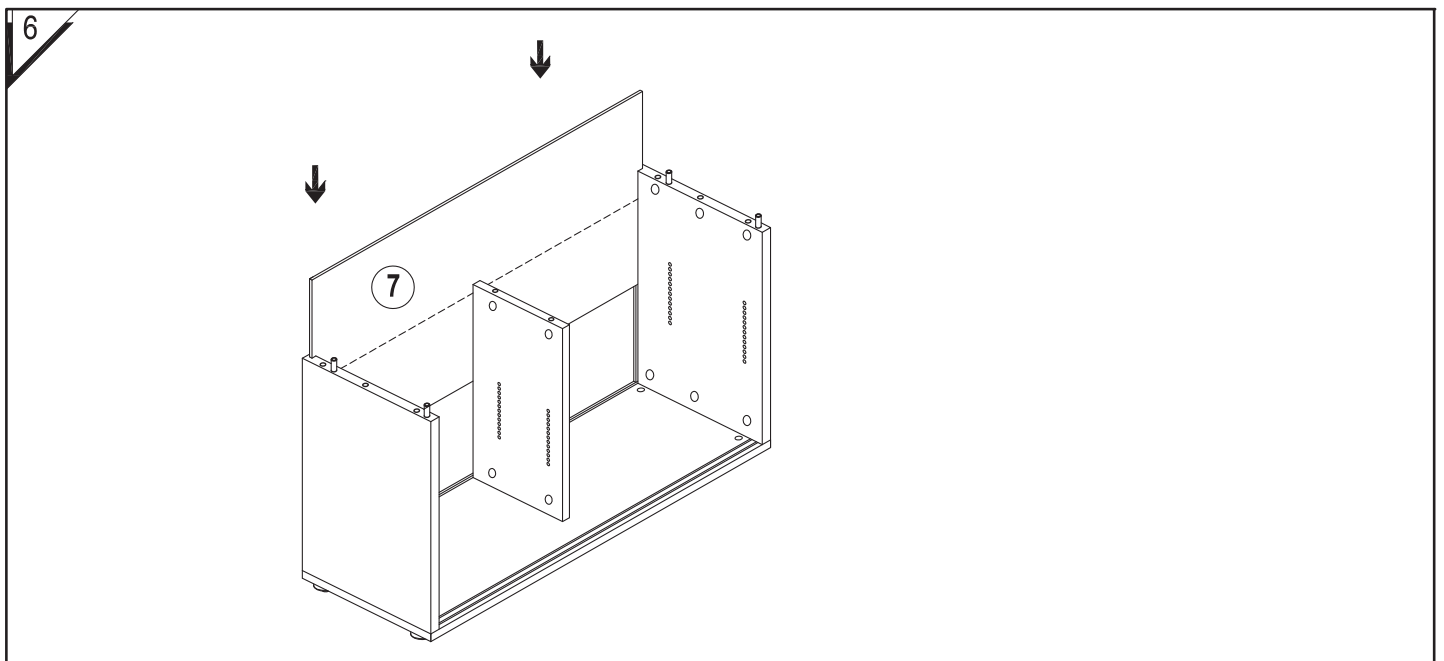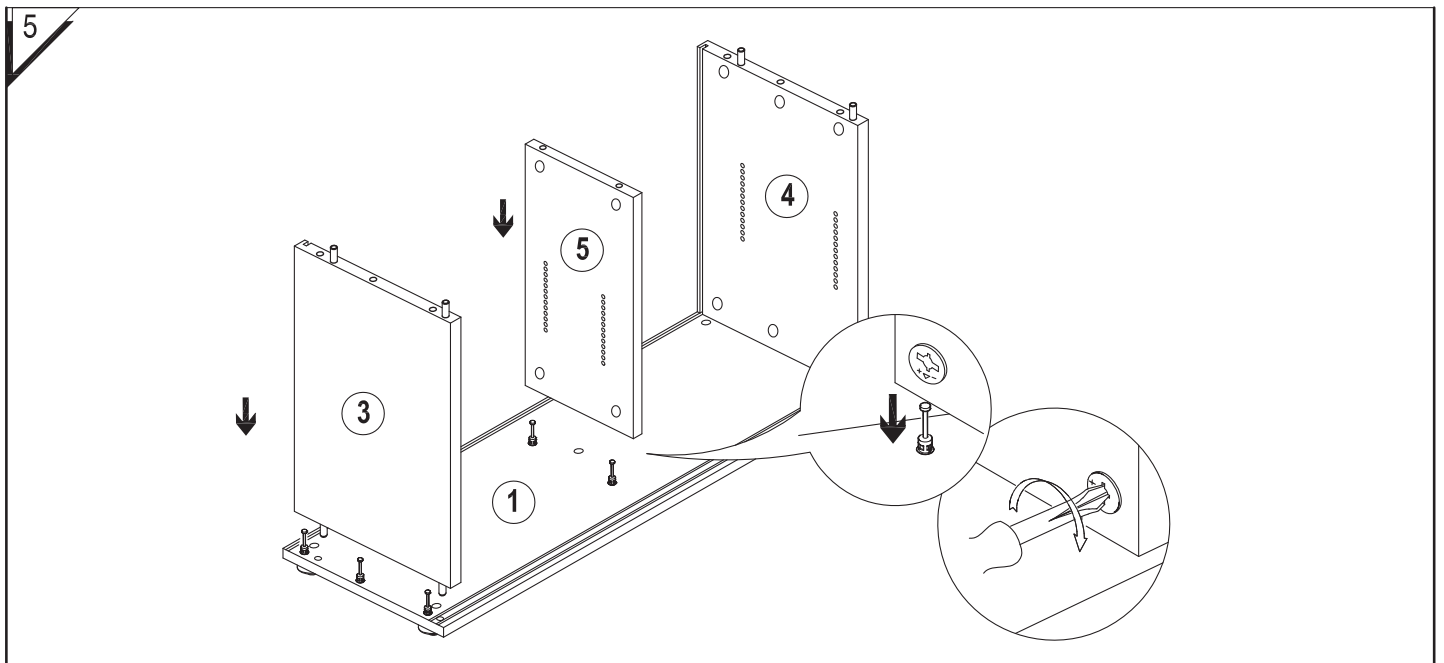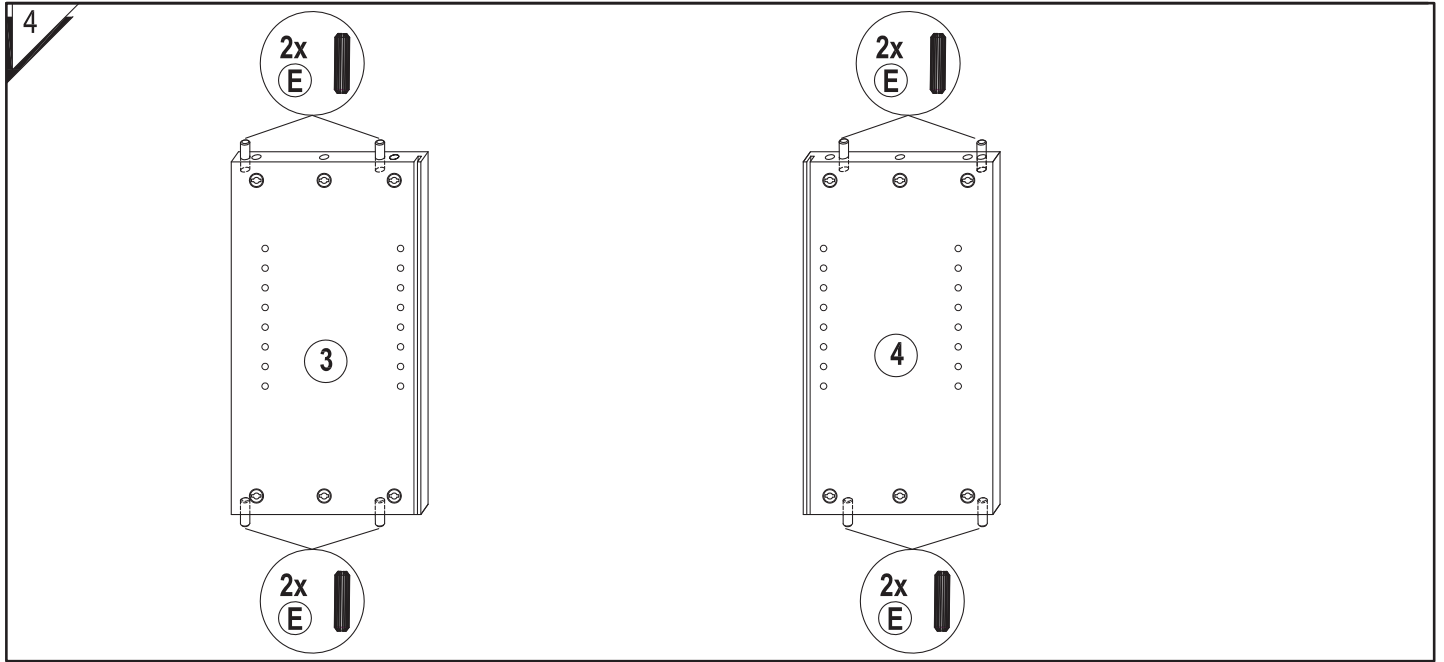


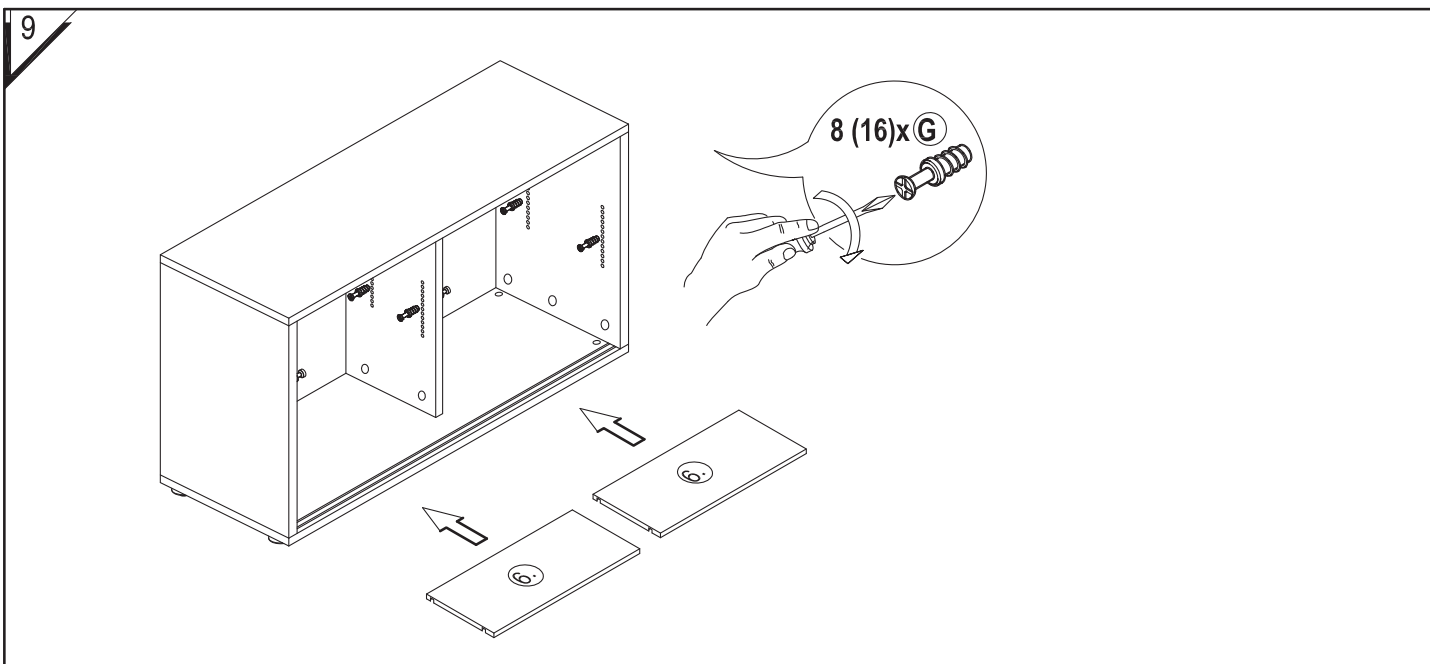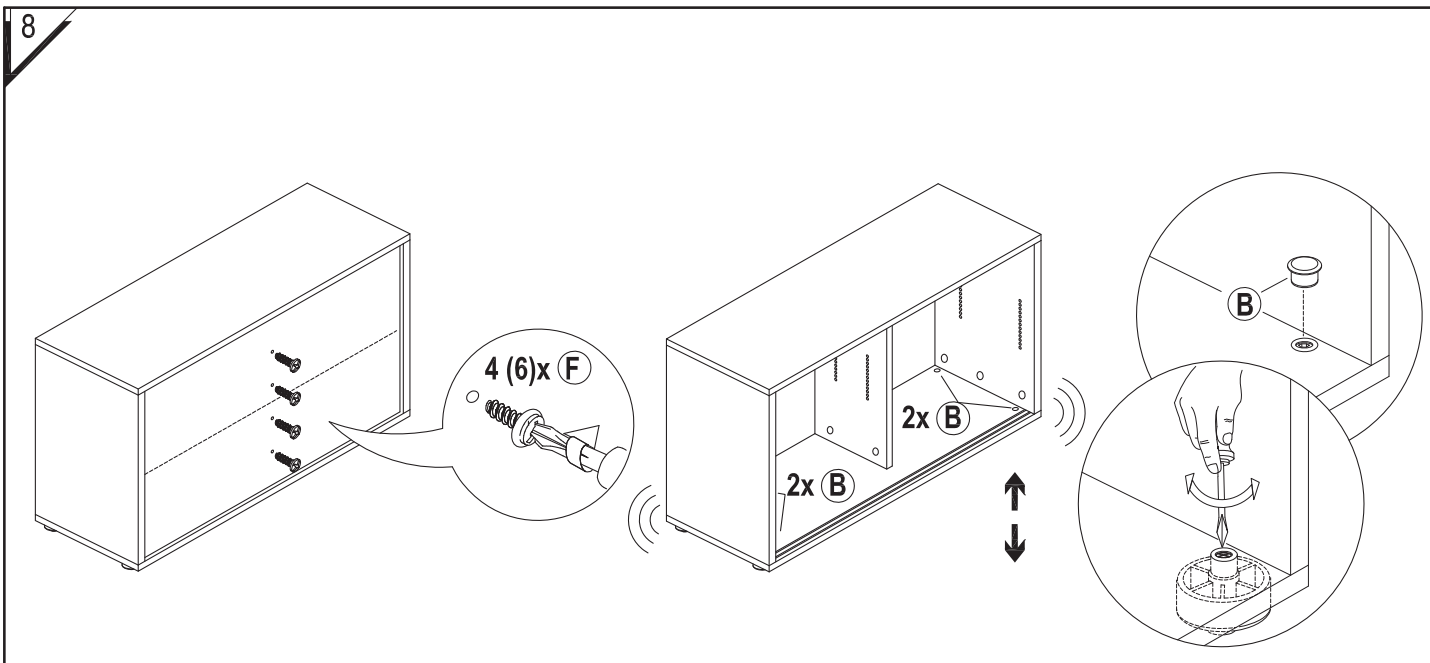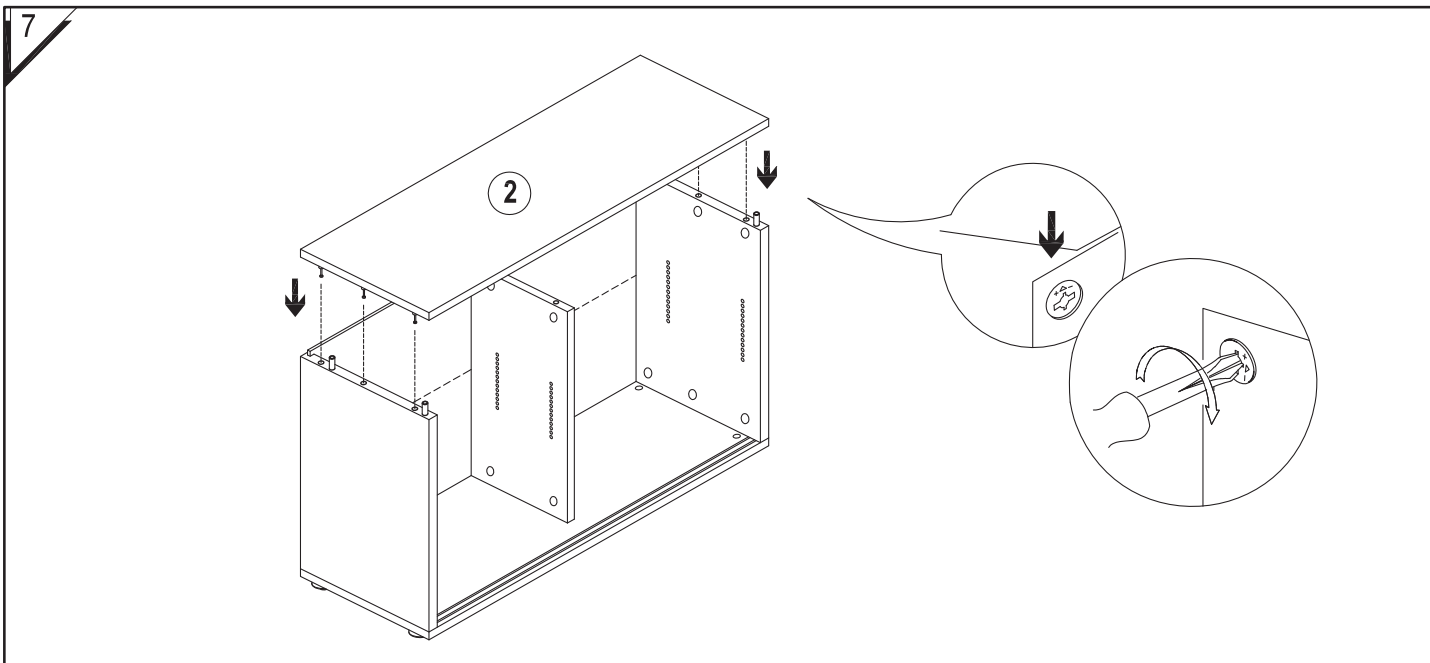


10

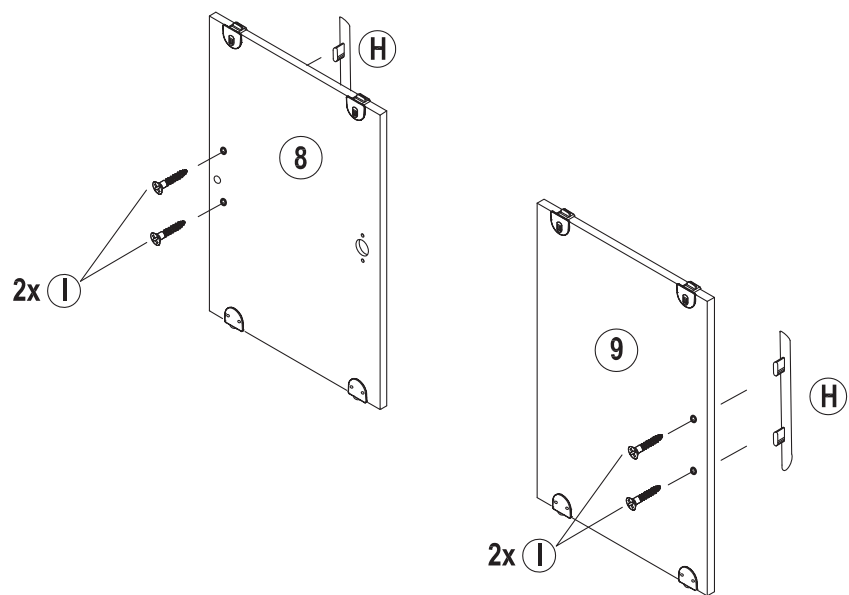


11

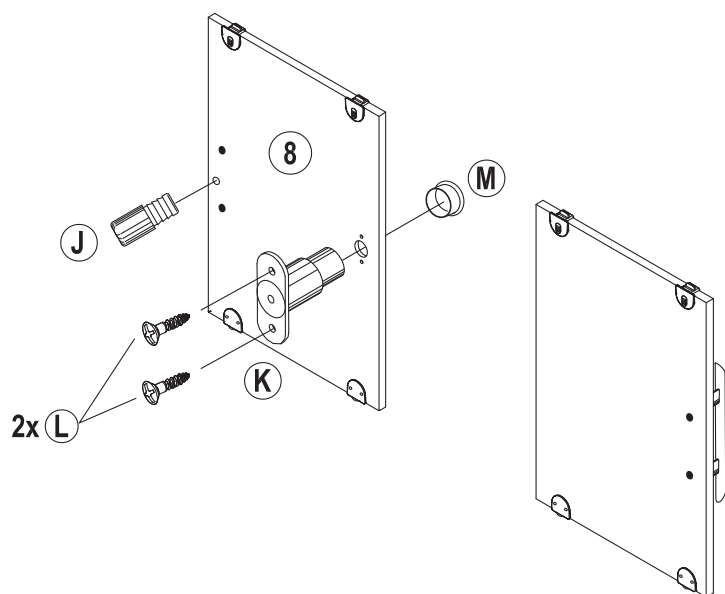


12

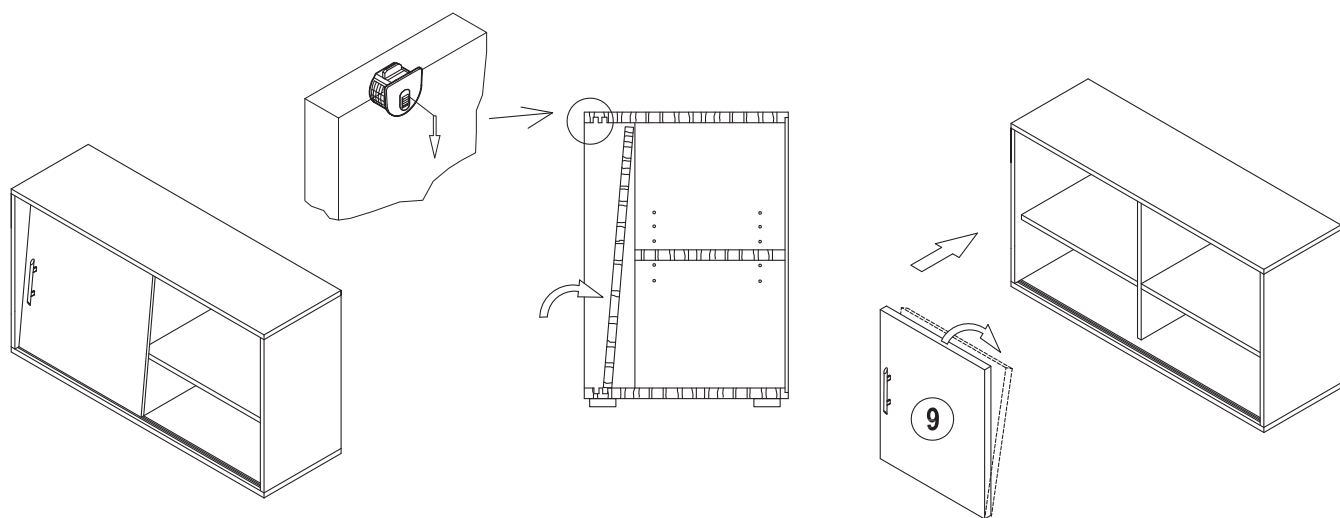

13

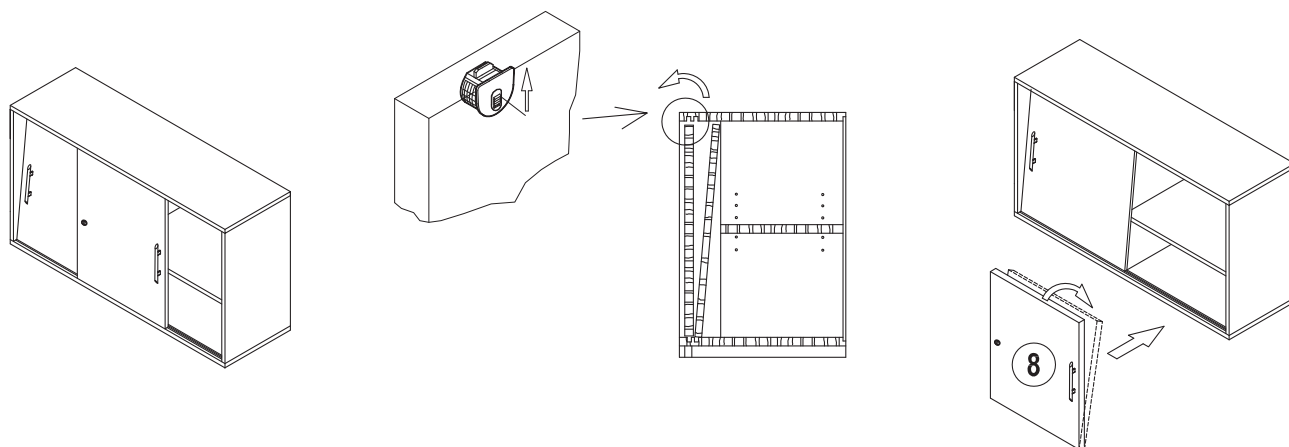

14

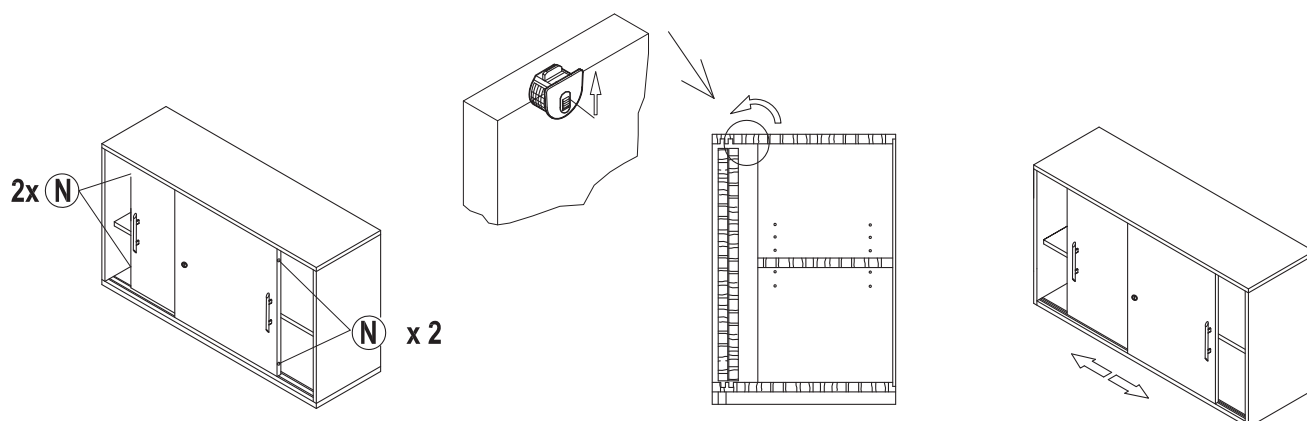

15

